



coway AIRMEGA USER MANUAL

Air Purifier Airmega 250/250S

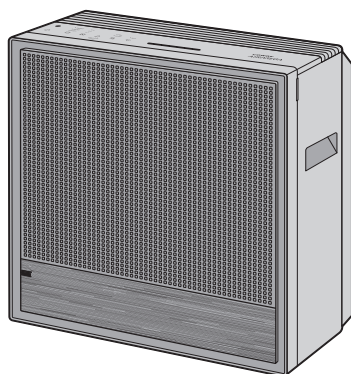

coway


Feature Highlights

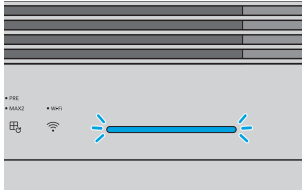

Real-time Air Quality Monitoring

Airmega's pollution sensor tells you the indoor air quality in real-time. The brightly colored LED bar lets you know if your indoor air is fresh or unhealthy every minute of the day. In addition, the particle sensor classifies the particle size of the PM10 and PM2.5, and the Bar display level of air quality.


► P. 19

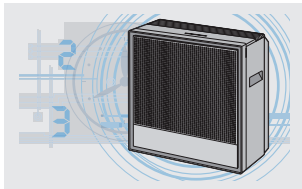

Smart Mode

With Smart Mode, Airmega adapts to its surroundings. Fan speeds automatically adjust based on the room's air quality and room conditions.

► P. 18

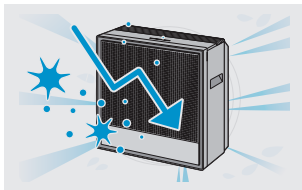


Rapid mode

Rapid mode enables faster indoor purification. The product operates at maximum performance until the air quality is reduced to level 1.




Connecting the Air Purifier to the Wi-Fi Network (250S only)

Find out the application pairing guide with the link provided below :
<https://iocare.coway.com/manual/eu/air/airmega250s.html>

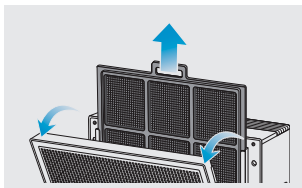

EZ release

Coway's unique front open type was applied to the product to remove and insert a frequently cleaned pre-filter easily.

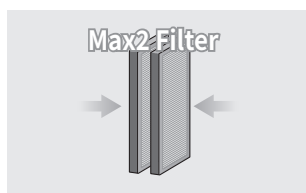

Max2 Filter

The Max2 filter (an activated carbon filter plus Green True HEPA filter) reduces more than 99% of volatile organic compounds (VOCs), odors such as NH_3 , CH_3CHO , CH_3COOH . It also captures and reduces up to 99.97 % of airborne particles in the air such as pollen, pollution, and other allergens

* Filter lifetime : Approximately 12 months (based on daily 8 hours usage at max speed)

► P. 4



Filter Lifetime Notifications


With status alerts for the Max2 filter and the Pre-filter, you'll know when it's time to replace them. And because the Airmega gauges how much air has traveled through it, you can be sure the notifications are accurate.

► P. 20

Quick Start Guide

Before operating the product, you must remove the plastic wrapping of the inserted Max2 filter. For details, see page 17.

Do not operate the product until completing these steps first.

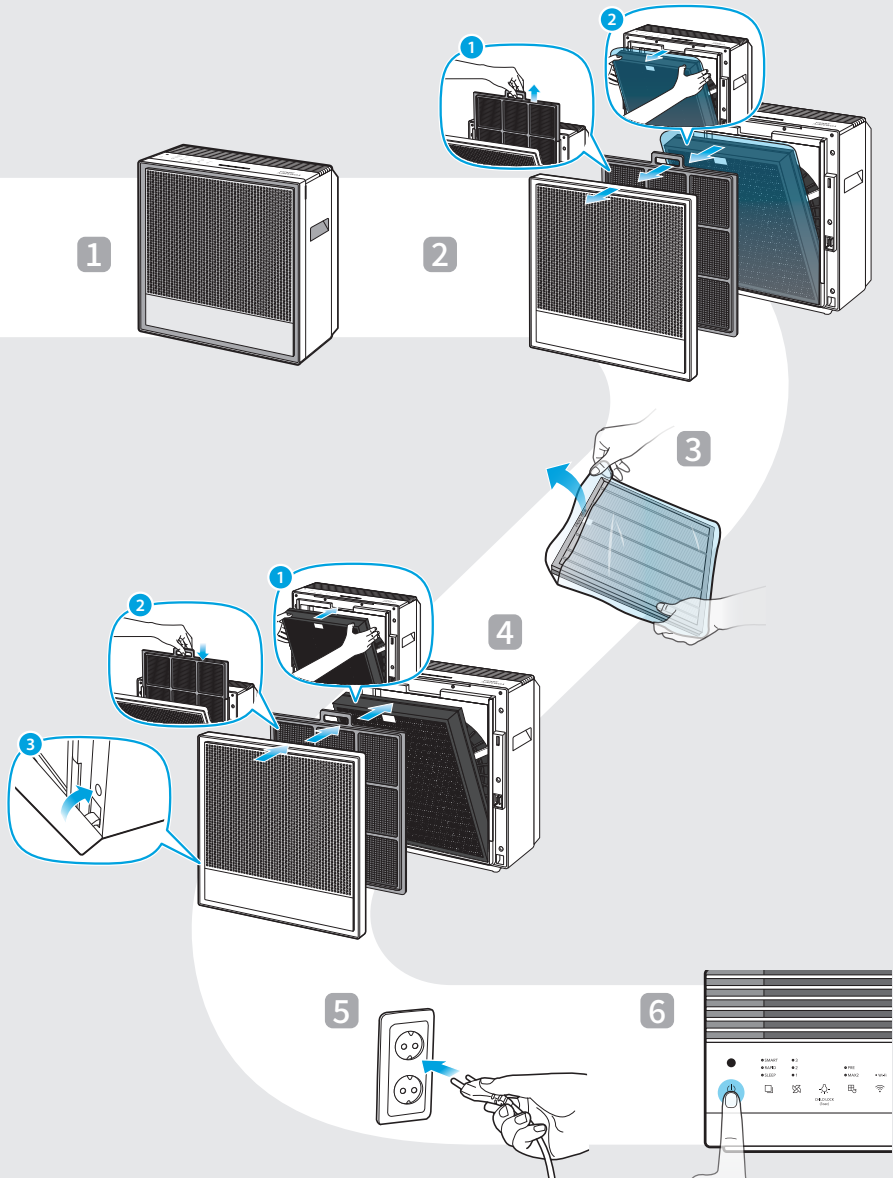

Connecting the Air Purifier to the Wi-Fi Network (250S only)



Find out the application pairing guide with the link provided below :

<https://iocare.coway.com/manual/eu/air/airmega250s.html>



Checking the product

Before installing the air purifier, make sure all of the components are present. If any items are missing or damaged, contact the customer service center.

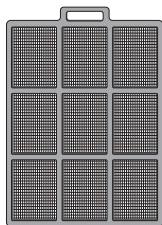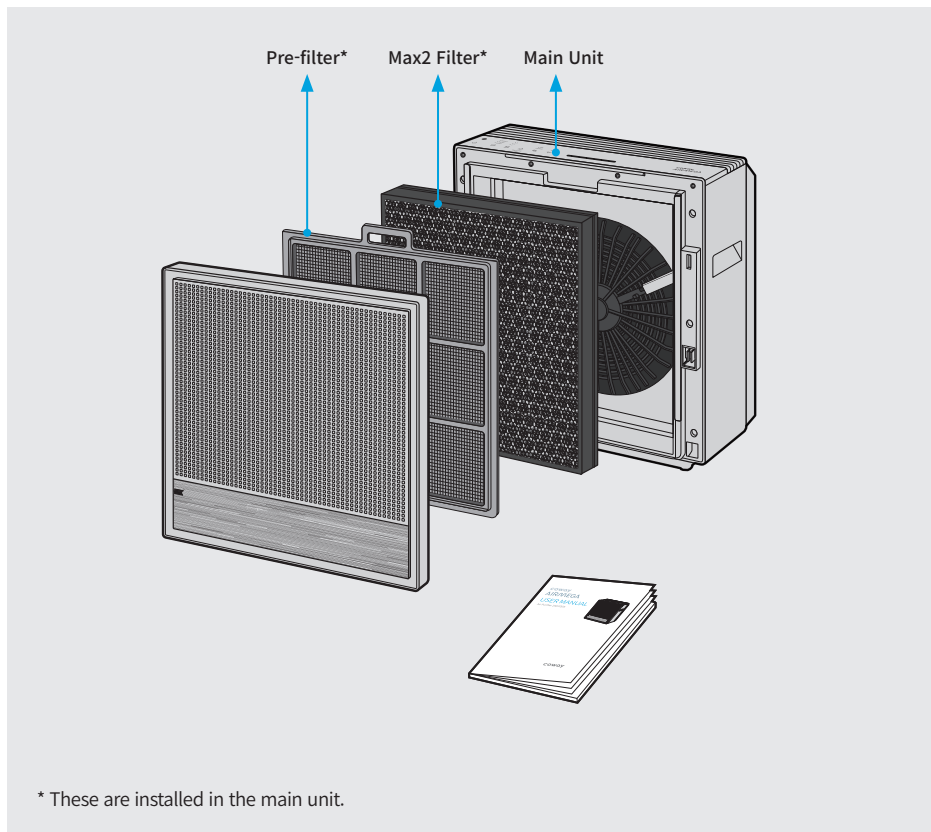

Pre-filter

Captures large particles like hair, fur, and dust by micro mesh.



Max2 filter (Activated Carbon + Green True HEPA)

Captures and reduces more than 99 % of VOCs and odors such as NH_3 , CH_3CHO , CH_3COOH . It also captures and reduces up to 99.97 % of airborne particles, allergens, and contaminants down to 0.3 microns in size.

Table of Contents

01 BEFORE USING THE PRODUCT	6
Symbols Used in This Manual	6
Safety Instructions	7
02 PREPARATION	12
Parts Diagram	12
03 INSTALLATION	15
Setting Up the Product	15
Connecting the Power and Turning On the Air Purifier	16
Connecting the Air Purifier to the Wi-Fi Network (250S Only)	16
04 OPERATION	17
Smart Mode - Auto	17
Smart Mode - Sleep	17
Smart Mode - ECO	18
Rapid Mode	18
Setting the Timer	18
Checking the Air Quality	19
Adjusting the Sensor Sensitivity	19
Cover Open Notification Display	20
Reset The User-Selected Filter Replacement Cycle	20
05 MAINTENANCE	21
Filter Maintenance and Cleaning Parts	21
Check Wi-Fi Connection And Status	26
06 APPENDIX	28
Troubleshooting	28
Specification	29
Legal Notice	30
Limited Warranty	32

Symbols Used in This Manual

The following symbols are used in this manual to explain procedures, restrictions, handling precautions, and instructions that should be observed for safety.

WARNING

Warning indicates a potentially hazardous situation that may result in death or severe injury to the user or others.

CAUTION

Caution indicates a potentially hazardous situation that may result in injury to the user or others, or the loss of property.

NOTE

Note indicates useful tips or additional information for procedures and product use.



This square bracket represents control buttons and indicators on the product.

Safety Instructions

Read and follow all the safety tips and warnings before using the product.

WARNING

- Do not exceed the voltage and power rating of the power outlet or connection device. This may generate excessive heat and cause electric shock or fire.
- Only use the appropriate type of electric socket for the product. Connecting the product to an incorrect socket may result in damage.
- Do not immerse the product or any of its parts in water. Operate the product only after a qualified technical examines and replaces the parts that were under water.
- Do not touch the power plug with wet hands.
- If the electric outlet is wet, do not connect the power plug of the product. Wait till the electric outlet dries completely before use.
- Do not operate the product if the motor fan fails to operate or is damaged.
- Disconnect the power plug from the electric outlet if strange sounds, smells, or smoke come from the product. Contact the customer service center immediately for instructions.
- Disconnect the power plug from the electric outlet when the product is not in use and before cleaning, inspecting, or replacing parts.
- Use a dedicated electric outlet for the product. Do not connect the product to a power strip that has connections to several other products.
- Do not operate the product if the power plug or cords are damaged.
- Do not forcibly bend, twist, pinch, or damage the power cord.

- Do not force the power plug into an incorrect electric outlet or into a loose electric outlet. Contact a qualified technician to install a proper electric outlet.
- A damaged power plug or cord must be replaced by the manufacturer or a qualified technician
- Remove the power plug from the electric outlet by grasping the power plug and pulling it gently. Never pull the cord to remove the power plug.

READ AND SAVE THESE INSTRUCTIONS

Safety Instructions

Read and follow all the safety tips and warnings before using the product.

WARNING

- Keep the electric cord away from heat sources.
- Do not repair the product unless this manual recommends it. Doing so will void your warranty. All repair work must be carried out by a qualified technician.
- This product has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Do not use this product in industrial areas or factories where oil, grease, or dust particles may be present. This product is for household use only.
- Do not change the filter while the product is operating. Always turn off the product and unplug the power plug before accessing the components inside the product.
- Do not place the product near a humidifier or in humid areas, such as bathrooms or laundry rooms, where the product may come into contact with water.
- Do not place the product near flammable gases, cigarettes, incense, and other combustible materials.
- Do not place the product on a bed or against soft objects, such as curtains.
- Do not clean the product using detergents, paint thinner, or other household solvents.
- Do not spray insecticides or other flammable materials near the product.

CAUTION

- This product should not be used by children under 8 without supervision.
- This product should not be used by persons with reduced physical, sensory, or mental capabilities or lack of experience without supervision or instruction concerning to the use of the product in a safe way and understand the hazards involved.
- Do not allow children to play with the plastic wrapping and product.
- Do not use this product with any solid-state speed control device, as it may result in electric shock or fire.
- Do not use an adapter or extension cord, as it may cause fire, shock, or personal injury.
- Do not use attachments or filters not recommended by the manufacturer.
- Exercise caution while removing the components from the product. Ensure that your body parts do not get stuck or scratched while servicing the product.
- Do not insert any objects or finger into the openings of the product. If any objects fall into the openings, immediately turn off the product and unplug the power plug. Contact a qualified technician or the manufacturer to remove the object.
- Do not wash or reuse the Max2 filter.
- Do not block the air outlet of the product. Doing so may decrease the efficiency of the product and increase the risk of injury.
- This product is for household use as described in this manual. Using it in an industrial environment or any other place not recommended by the manufacturer and may result in electric shock, fire, and injury to person.

- Do not place anything on top of the product.
- Do not run the power cord under carpets or cover it with rugs.
- Change the filters at the recommended intervals so that excess dust does not accumulate.
- Do not place the product where the both sides of product are blocked.
- Do not place the product in direct sunlight.
- Do not place the product next to or on windows.
- Place the product on a firm, flat, and dry surface that provides sufficient air circulation.
- Keep the product and its cord out of way, where it cannot be stepped on or tripped over.
- The end user has to be informed to keep at least 20 cm separation with the antenna while this end product is installed and operated.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

READ AND SAVE THESE INSTRUCTIONS


Parts Diagram

Check the parts of the product (exterior in the front and top view and control panel) and how they function.


Exterior

Check the parts and functions of the exterior of the product.

Side View

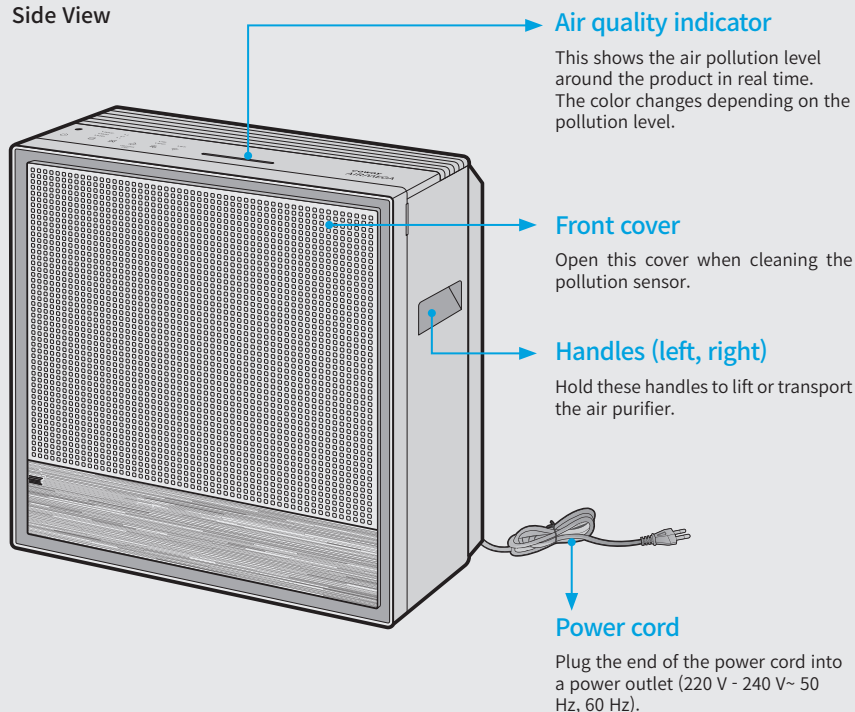


Top View

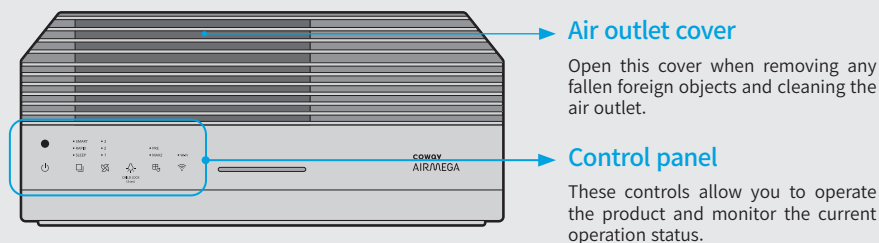


Parts Diagram

Check the parts of the product (exterior in the front and top view and control panel) and how they function.

Control Panel (250S)

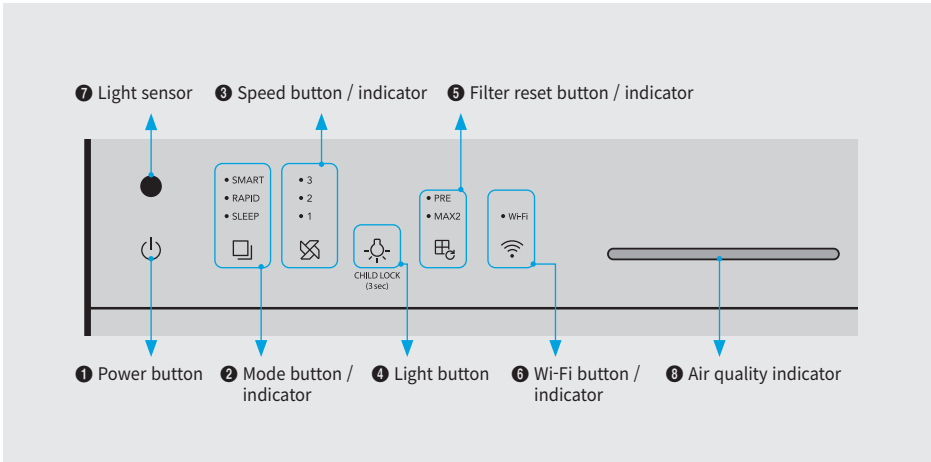

Control Panel (250)

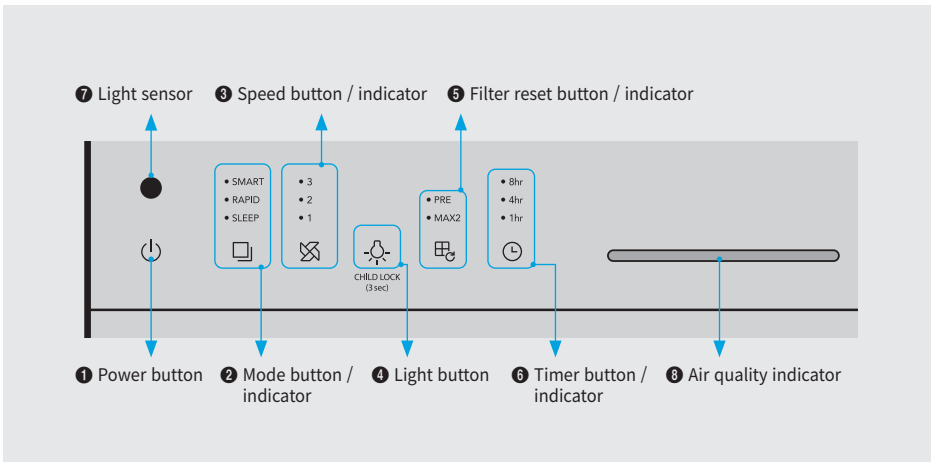

button/indicator

1 Power button

Use the button to turn the product on and off.

- When the product operates for the first time, it is operated in the smart mode. If you turn off the product during operation and turn it on again, it is operated in the mode active before the product was turned off.



2 Mode button / indicator

Press the mode button to select the smart mode → rapid mode → sleep mode.

- SMART
- RAPID
- SLEEP



3 Speed button / indicator

Press the speed button to select the level 1 → level 2 → level 3. The indicator is turned on when the speed level 1/level 2/level 3 is selected.

- 3
- 2
- 1



4 Light button

Use this button to turn on and off the indicator and air quality indicator. If you press the [Light] button while all indicators and the air quality indicator are turned on, you can turn on and off the indicators in the following order: Air quality indicator off → all indicators off → all indicators on.



CHILD LOCK
(3 sec)

5 Filter reset button / indicator

When the filter replacement indicator is turned on, press the corresponding button for more than 3 seconds after cleaning and replacing the filter. The indicator stays on during the filter cleaning/replacement cycle. When the cleaning cycle or life becomes less than 2%, the corresponding indicator will emit an orange color light.

- If both indicators(PRE and MAX2) turn on at the same time, the filters can be reset at once.
- If the filter replacement indicator is not turned on, the related button functions do not operate.
- If you have replaced or repaired the filter before the filter replacement indicator was turned on, refer to page 21.
- The cleaning and replacement cycle of the pre-filter and combined filter is recommended and may vary depending on the use environment.

- PRE
- MAX2



6 Wi-Fi button / indicator (Only 250S)

Touch the Wi-Fi button to connect to a Wi-Fi network. When connected to Wi-Fi, the status indicator's light will turn on.

- Wi-Fi



6 Timer button / indicator (Only 250)

Press the timer button to set the timer.

- 8hr
- 4hr
- 1hr



7 Light sensor

This sensor detects light around the product.



8 Air quality indicator

This indicator displays the indoor air quality in LED colors.
Good (blue) → Moderate (green) → Unhealthy (yellow) → Very unhealthy (Red)




Setting Up the Product

Before using the product, you must remove the plastic wrapping of the inserted Max2 filter.

⚠ CAUTION

Make sure that the power cord is unplugged before opening the covers.

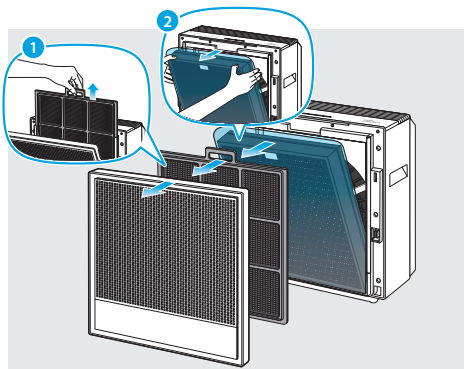

1 Open the cover located at the front of the product.

Cover ► Pre-filter ► Max2 filter




2 Remove the plastic wrapping for Max2 filter.

Discard the plastic wrapping for Max2 filter.

⚠ CAUTION

- When removing the plastic wrapping from the filter, be careful not to damage the surface of filter.
- Do not allow children to play with the plastic wrapping.

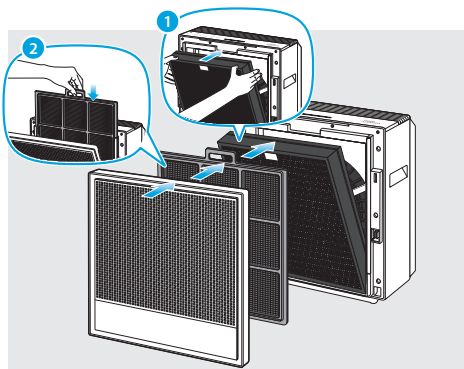

3 Return the filter and cover in reverse order at the first step.

Max2 filter ► Pre-filter ► Cover

📌 NOTE


- Place the Max2 filter into the filter case with the green side facing the product. Reversed placement may affect the filter lifetime.
- The product will not turn on if the cover is installed incorrectly.

Connecting the Power and Turning On the Air Purifier

When your filters are prepared, connect the power and turn on the air purifier.


⚠ CAUTION

This product is for 220 V - 240 V~ 50 Hz, 60 Hz use only. Make sure your power supply meets these requirements.

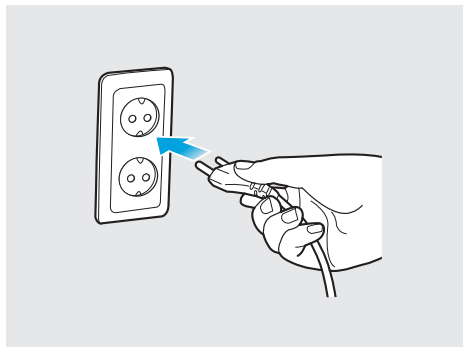



1 Insert the power plug into a power outlet.

The indicators on the air purifier will blink.

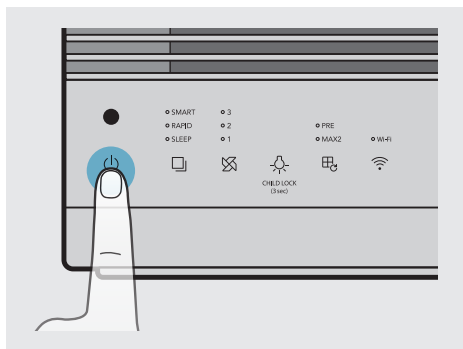

2 Touch the [Power] button to turn the air purifier on.

You will hear a chime sound when the air purifier starts to operate.

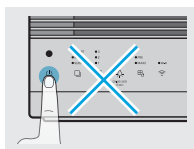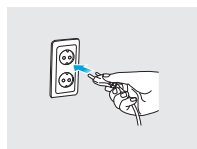

⚠ CAUTION

- Do not touch the control panel while connecting the power.
- Buttons may not work for a certain period of time.
- If the buttons do not work, unplug the power cord for about 10 minutes to discharge, and then connect it again.

Connecting the Air Purifier to the Wi-Fi Network (250S Only)

Find out the application pairing guide with the link provided below :

<https://iocare.coway.com/manual/eu/air/airmega250s.html>




Smart Mode - Auto

If the product is set to Smart mode, it automatically adjusts the air speed according to the current air quality around the product. The air speed is adjusted as shown in the table below:

Air Quality	Good	Moderate/unhealthy	Very unhealthy
Air Speed	Level 1	Level 2	Level 3

250S/250

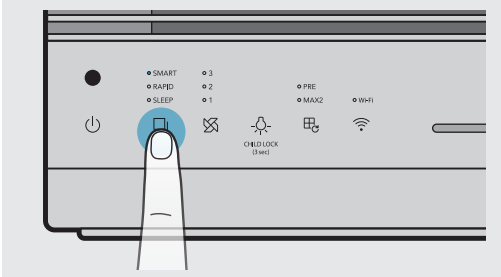


Press the [Mode] button to select the smart mode.

Smart Mode - Sleep

If the product is set to Smart mode, Sleep mode is activated automatically, so that it can reduce noise and power consumption. It activates when the room is dark and the air quality is Good(Level 1) for 3 minutes.

If the light sensor detects light for 5 minutes or longer and/or if the air quality level in the room is Moderate(Level 2) or worse. The Smart mode will activate automatically.

250S/250

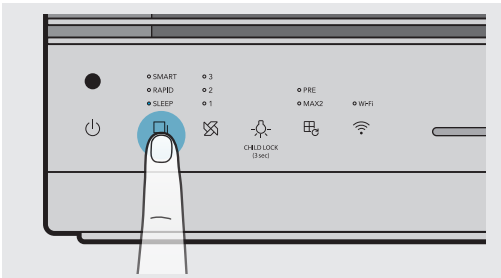


Press the [Mode] button to select the sleep mode. This mode minimizes the speed during operation for a quiet and pleasant environment.

Smart Mode - ECO

When set to Smart Mode, if the pollution level remains **Good**(Level 1) for more than 10 minutes, the fan stops automatically to conserve energy. If the product detects air pollution, the fan will automatically restart again.

If the pollution level remains Good(Level 1) for more than 10 minutes in smart mode, the fan stops automatically to save energy.

If the product detects air pollution, the fan will automatically restart. Also, if the ECO mode maintains for 30 minutes, the fan will restart as well. If the pollution level remains Good for more than 10 minutes after restarting, the ECO mode will be activated again.

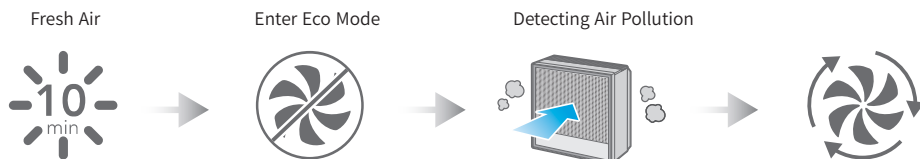


Rapid Mode

Press the [Mode] button to select rapid mode. When the air quality is maintained at level 1 for more than 5 minutes, it is switched to the smart mode. When the product continues to operate for more than a maximum of 60 minutes, it is switched to the smart mode.

- The maximum fan speed in the rapid mode is the same as level 3.


250S/250

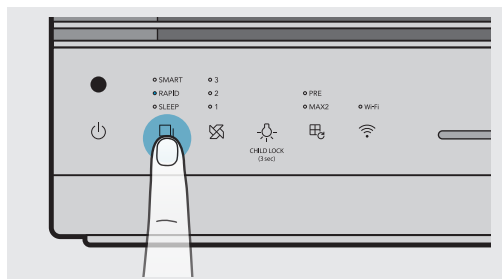

Setting the Timer


You can set the product to automatically turn off after an hour, 4 hours, or 8 hours. Use this feature to save energy when you leave home or go to bed.

250S

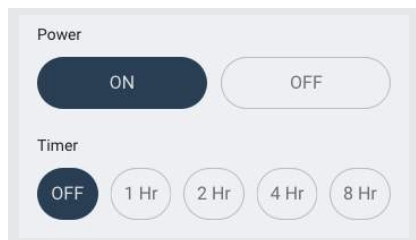

For 250S users, you can set the timer and scheduler using Airmega application.

250

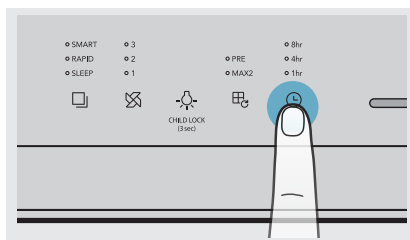


Touch the [Timer] button until the indicator light displays the desired time.

Checking the Air Quality

You can easily check the current air quality around the product using the air quality indicator on the front of the product.

NOTE


For 250S/250 users, you can also check the current air quality in the smart phone application.

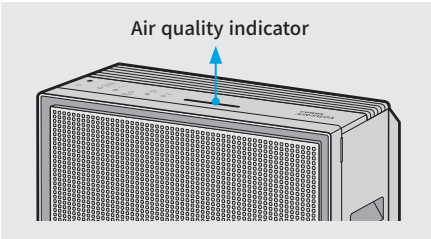


Air quality indicator
This indicator displays the indoor air quality in LED colors.
Good (blue) → Moderate (green) → Unhealthy (yellow) → Very unhealthy (Red)

Adjusting the Sensor Sensitivity

You can adjust the pollution sensor's sensitivity.

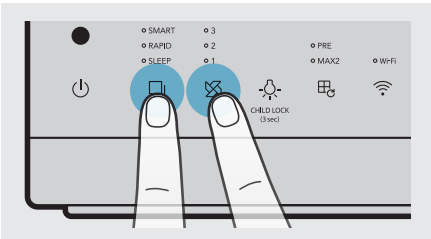


- 1 While the product is operating, press the [Mode] button and the [Speed] button at the same time for more than 2 seconds.
The speed indicator blinks to display the current sensor sensitivity level.
· Initial sensor sensitivity is at the normal level.

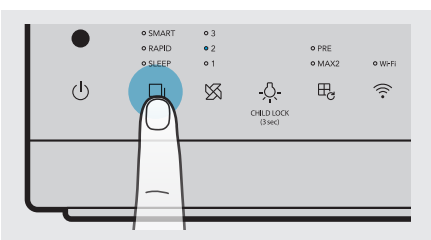

- 2 Press the [Mode] button to adjust it to the desired sensitivity. The mode indicator blinks as shown below once sensor sensitivity has been selected.

	1	2	3
Sensitivity	Sensitive	Normal	Less sensitive


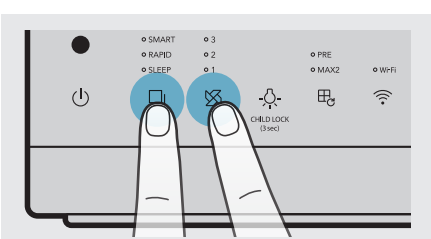


- 3 Press the [Mode] button and the [Speed] button at the same time for more than about 2 seconds, the selected sensitivity will be inputted and the product will start operating normally.
· If the [Speed] button are not pressed for 10 seconds, the selected sensitivity of the sensor is automatically entered.

Cover Open Notification Display


When opening the cover while using the product

When the front cover is detected open for more than 2 seconds, all indicators will turn off and the product stops all operation. When the front cover is detected closed for more than 1 second, the product returns to the previous operation mode.

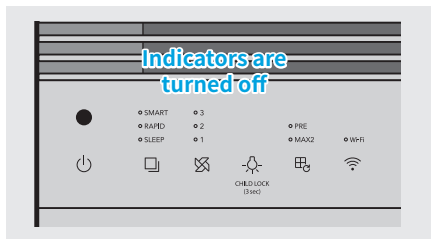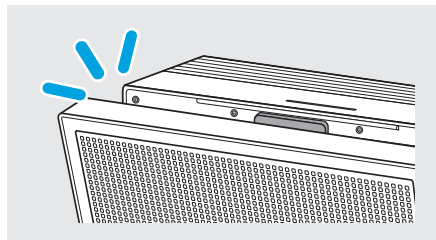


Reset The User-Selected Filter Replacement Cycle

This instruction is a guide for the next filter replacement maintenance. The filter replacement and cleaning cycle selected by the user when the user replaces or cleans a filter by themselves before the filter replacement notification is displayed.

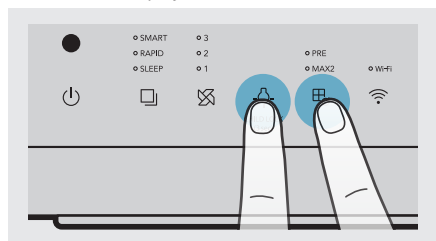


- 1 Press the [Filter reset] button and [Light] button at the same time for more than 2 seconds.

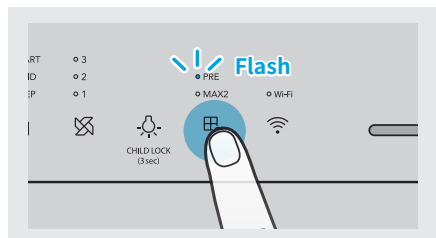

- 2 The pre-filter indicator will start blinking. Then press the [Filter reset] button to select the filter that needs to be replaced or cleaned. Also, if you press the [Filter reset] button for more than 2 seconds, the selected filter option will reset.

- A filter is selected in the following order.
Pre-filter → max2 filter → pre-filter & max2 filter → pre-filter
- If you do not reset the filter and press the [Light] button and the [Filter reset] button again at the same time for about more than 2 seconds, or if you do not press the [Mode] button or the [Filter reset] button for 10 seconds, the filter is automatically canceled.

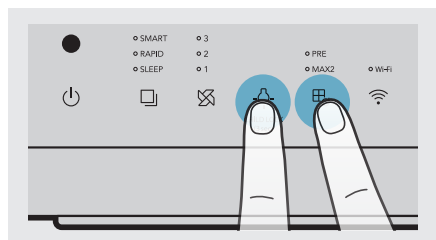

NOTE

- If you replaced or managed the filter before a filter replacement alarm is displayed, reset the filter replacement cycle using the user-selected filter replacement cycle reset function.
- Adjusting the sensitivity of air quality sensor and resetting the user-selected filter replacement cycle have the same entering and canceling method.

Filter Maintenance and Cleaning Parts

Clean the Pre-filter and each part of the main unit and replace the Max2 filter regularly for optimum performance. The following tables show the recommended maintenance cycle for filters and the cleaning cycle for each part.

Maintenance Filter	Maintenance Cycle
Pre-filter*	Cleaning the filters whenever the filter indicator is on**
Max2 filter*	Replacing the filters whenever the filter indicator is on***

* After cleaning or replacing the filters, make sure to reset the filter indicator on the control panel. (P.20)

** 250S : Approximately 2 weeks (based on daily 8 hours usage at max speed) The filter cleaning cycle can be adjustable in the smartphone application.

250 : Approximately 2 weeks (based on daily 8 hours usage at max speed)

*** Approximately 12 months (based on daily 8 hours usage at max speed)

The filter lifetime may differ depending on the real running time of the product and the fan speed.

The figures above are evaluated on a general basis.

Cleaning Parts	Cleaning Cycle
Front cover	Every 2 months (recommended)
Air outlet	
Pollution sensor	


CAUTION

- Be sure to turn off the power and disconnect the power plug before cleaning each part or replacing the Max2 filter.
- Do not use detergents that contain solvents, thinners, bleach, chlorine, or abrasives.
- Do not immerse the product in water or spray the product with water.
- If you use water to clean the pre-filter, dry the pre-filter in the shade before re-installing it.

NOTE

- If you are using the product in a polluted environment, clean each part or replace the Max2 filter more frequently than the recommended cycle.
- Using a Airmega genuine filter is recommended for optimum performance.
- The Max2 filter are not reusable. Do not try to clean them with water. Always replace them with a new one.
- When disposing of the old Max2 filter, follow your local regulations.

Exterior

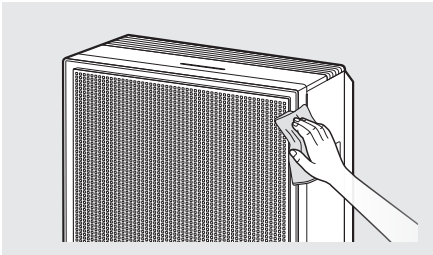


Wipe the exterior of the product with a soft dry cloth.

When the exterior is dirty, use a slightly damp cloth.


Pre-filter

When the [Pre Wash] indicator is on, clean your pre-filter on front. Follow these instructions below to clean the filter.

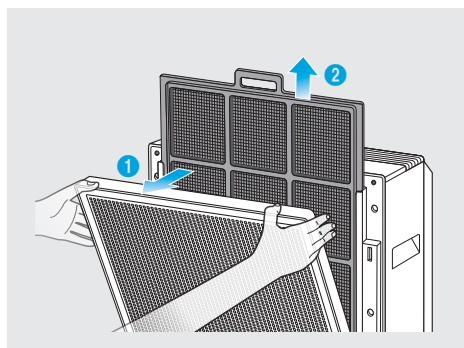

1 Open the front cover by pulling out the top part of it.

2 Pull the pre-filter upward to take it out.
- Be careful not to let dust fall off when removing.

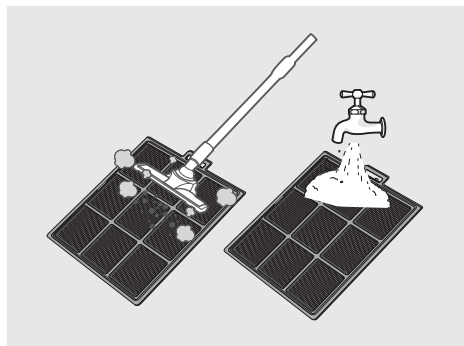


3 Remove dust with a vacuum cleaner or water depending on the degree of pollution.

- Be careful not to let dust fall inside the product when cleaning.

⚠ CAUTION

If you use water to clean the pre-filter, dry the pre-filter in the shade before re-installing it.

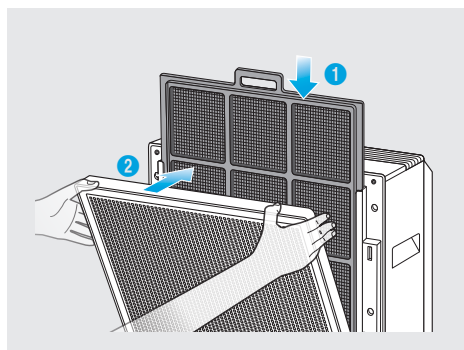

4 Push in the dried pre-filter inside the product all the way to install. Close the side cover again.

- When assembling the pre-filter, press the hooks on both sides completely.

- And touch and hold the [Filter reset] button refer to 14 page.


Max2 filter

How to replace the Max2 Filter

Refer to 15 page. And touch and hold the [Filter reset] button refer to 14 page.


Front Covers

Clean the front covers frequently for optimum performance. Follow these instructions below to clean the covers.

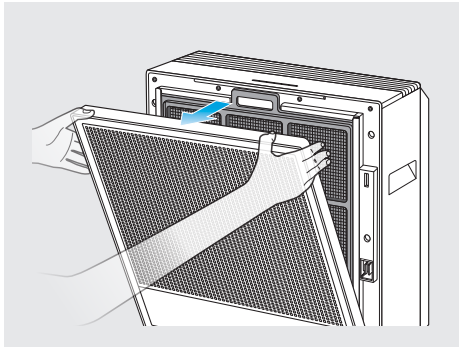


1 Remove the front covers.

- Lift and pull the upper part of front cover to remove it.

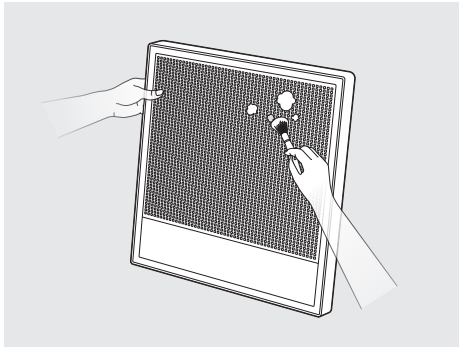

2 Remove dust with a soft, dry cloth or brush.

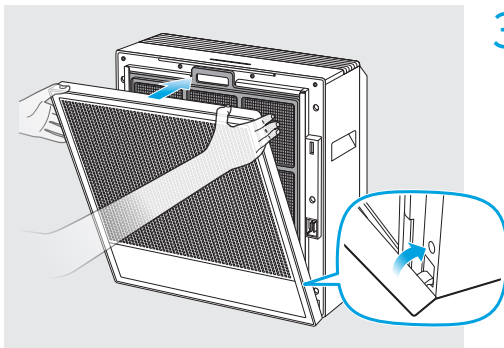


3 Fit the cover to the grooves at the bottom of the product, and push the cover into place.

NOTE


The product will not turn on if the right and left covers are installed incorrectly.

Air outlet

Cleaning the detachable air outlet and grille

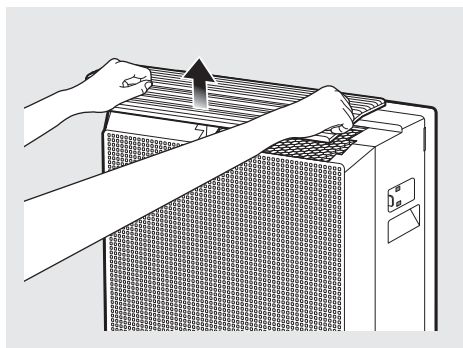

- 1 Lift up the detachable air outlet grille mounted on top of the air outlet.

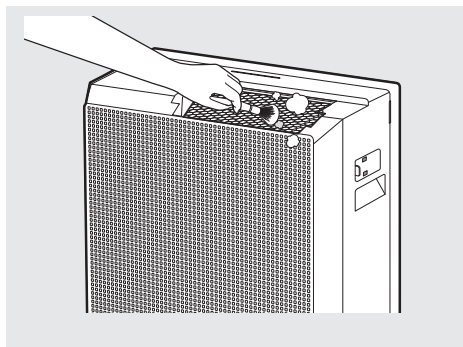


- 2 Clean the grill and the air outlet using a soft brush or vacuum cleaner.

• Do not let dusts drop into the air outlet when you clean it.


Pollution Sensor

Clean the pollution sensor approximately every 2 months for optimum performance. Follow these instructions below to clean it.

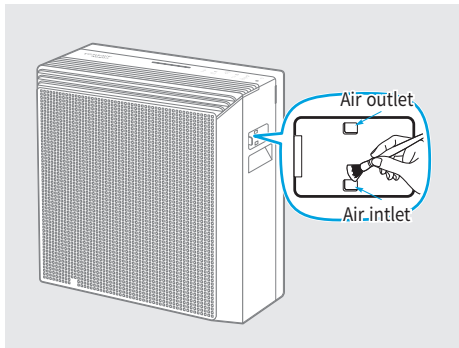


- 1 Use a soft brush or vacuum cleaner to clean the air inlet and the air outlet of the air quality sensor.

- Be careful not to let dust fall inside the product when cleaning.

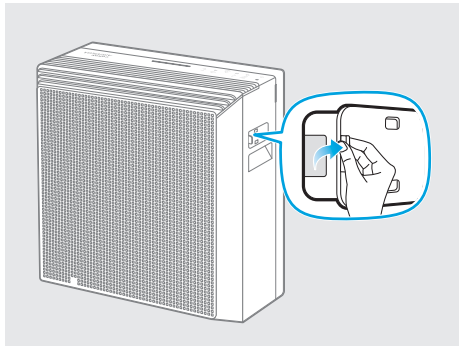

- 2 Open the air quality sensor cover on the right-hand side of the product. (by using the hole on the air quality sensor cover.)

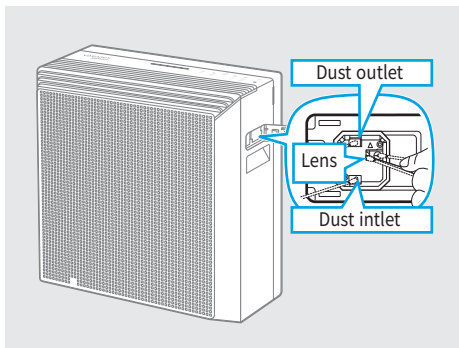


- 3 Wet a cotton swab lightly and clean the lens, dust inlet, and dust outlet. Clean them with a dry cotton swab to remove the remaining moisture.

NOTE

Without regular cleaning, the performance of the air quality sensor deteriorates.

When using the product in a dusty environment, clean the sensor more often.

Check Wi-Fi Connection And Status

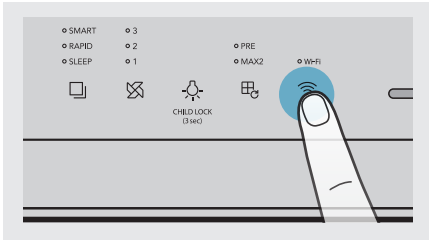

Connecting the air purifier to the Wi-Fi network


Find the application pairing guide with the link provided below: <https://iocare.coway.com/manual/eu/air/airmega250s.html>

EN


If displayed as below when connecting to Wi-Fi, please refer to the following.



- 1 When the wireless router connection is denied, the indicators on smart, sleep, and speed level 1 will blink.

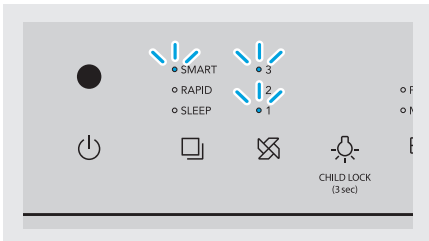

- 2 When the wireless router search continues for 1 minute (TIME OUT status), the indicators on smart, speed level 1, and speed level 3 will blink.

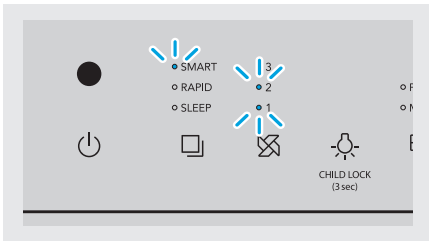


- 3 If there is no response from the wireless router, the indicators on smart, speed level 1, and speed level 2 will blink.

If displayed as below when connecting to the Wi-Fi, please refer to the following.

NOTE

1. Check the power of the wireless router.
2. Check that you can connect to the Internet through the Wi-Fi of the wireless router.
3. If the wireless router operates properly, the product automatically connects to the Wi-Fi to which the product has been previously connected.
4. If the product does not connect automatically after a certain period of time, use the loCare app to reconnect.
5. If the product has never been connected to Wi-Fi, or if the Wi-Fi name/password has been changed, please connect through the loCare app.

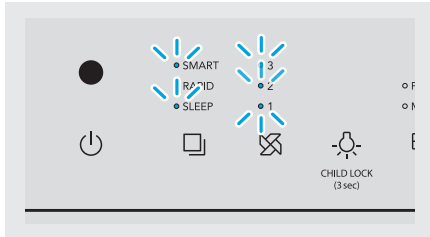


- 4** If the connection is lost or the connection is terminated when there is no server response, the indicators in smart, sleep, and speed level 1/2/3 blink.

This is a network or server error that may occur temporarily. After a certain period of time, the server is connected correctly (automatic reconnection). If the above phenomenon persists even after a certain period of time, please follow the instructions below.

NOTE

1. Please check the Internet is available with the corresponding Wi-Fi and network first. (In case of network failure, it is difficult to provide the time required to connect to the server.)
2. If the above message continues to appear on the product while the Wi-Fi LED blinks, please reconnect through the loCare app.
3. If the problem persists after this, please contact customer service (1-800-285-0982). Abnormal termination (upon temporary power failure or reconnecting immediately after removing the power plug) errors may occur when reconnected with the server. In this case, please reconnect in 5 minutes after removing the power cord.

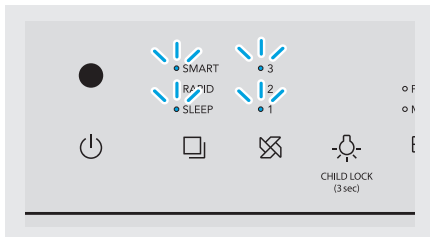

- 5** If the wireless router's encryption information is inconsistent, the indicators in smart, sleep, speed 1, and speed 3 will blink. You need to check the wireless router's password. Check the password and retry the Wi-Fi connection.

Troubleshooting

Before contacting the customer service center, please attempt the following solutions. All other servicing should be done by an Airmega authorized service center.

No air comes out from the air outlet.

Check	Is the power plug connected?
Solution	Connect the power plug to an AC power outlet (220 V - 240 V~ 50 Hz, 60 Hz).
Check	Are all the indicators turned off?
Solution	Touch the [Power] button to turn on the product.
Check	Has power failure occurred?
Solution	Wait until the power is restored, and then try to use the product.

Air speed from the air outlet is significantly low.

Check	Have the filter cleaning and replacement cycle passed?
Solution	Confirm the filter cleaning and replacement cycle, and then clean or replace the filter if necessary. (P. 22, P. 23)

The pollution level does not change.

Check	Is the pollution sensor's lens polluted?
Solution	Clean the pollution sensor. (P. 25)
Check 1	Does the pollution level remain 'Very unhealthy' after operating the air purifier for more than two hours?
Check 2	Does the pollution level remain 'Good' for more than an hour when operating the air purifier in a polluted environment?
Solution	Adjust the pollution sensor's sensitivity. (P. 19)

A bad smell comes out from the air outlet.

Check	Have the filter cleaning and replacement cycle passed?
Solution	Confirm the filter cleaning and replacement cycle, and then clean or replace the filter if necessary. (P. 22, P. 23)

* Regarding Airmega app troubleshooting, please visit www.cowaymega.com for more information.

Specification

The specification is subject to minor changes to improve the product performance.

Item	Specification	
Model Name	Airmega 250S	Airmega 250
Coverage	930 ft ² (86 m ²)* 465 ft ² (43 m ²)**	
Filter	Washable Pre - Filter + Max2 filter set (Activated Carbon + Green True HEPA)	
Rated Voltage	220 V - 240 V~ 50 Hz, 60 Hz	
Power	64 W	
Weight	20.5 lb (9.3 kg)	
Size (WxDxH)	18.5 x 8.03 x 19.7 inch (47.0 x 20.4 x 50.1 cm)	

There may be slight changes to the specifications for improving the product’s performance.

The recommended use area and the maximum air volume are results of measurement in Turbo Mode in the Normal circulation mode.

Legal Notice

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

IC Statement

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

The device could automatically discontinue transmission in case of absence of information to transmit, or operational failure. Note that this is not intended to prohibit transmission of control or signaling information or the use of repetitive codes where required by the technology.

The device for the band 5150-5250 MHz is only for indoor usage to reduce potential for harmful interference to co-channel mobile satellite systems.

The maximum antenna gain permitted (for devices in the bands 5250-5350 MHz and 5470-5725 MHz) to comply with the e.i.r.p. limit.

The maximum antenna gain permitted (for devices in the band 5725-5825 MHz) to comply with the e.i.r.p. limits specified for point-to-point and non point-to-point operation as appropriate, High-power radars are allocated as primary users (meaning they have priority) of the bands 5250-5350 MHz and 5650-5850 MHz and these radars could cause interference and/or damage to LE-LAN devices.

Devices is not capable of transmitting in the band 5600-5650 MHz. This restriction is for the protection of Environment Canada's weather radars operating in this band.

Legal Notice

IMPORTANT NOTE:

IC Radiation Exposure Statement

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Transmit Antenna Notice

This radio transmitter [IC: 12641A-WFM5SFP2501] has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Antenna list (type, maximum gain(dBi))

Model	Type	Maximum gain (dBi)
INNO-APC-0309	PCB pattern antenna	- 2400 ~ 2483.5 MHz : 2±1 (dBi) - 5150 ~ 5875 MHz : 3±1 (dBi)

WARRANTY CARD OR WARRANTY LETTER TWO YEAR LIMITED WARRANTY AIR PURIFIER 250/250S(“PRODUCT”)

Model:

Serial Number:

Customer Name:

Date of Purchase:

(“OWNER”)

What This Warranty Covers:

Commencing with the date of purchase of the Product and continuing for a period of Two years, if manufacturing defects in the Product cause the Product to not operate properly for its intended use, then subject to the exclusions, conditions, and limitations contained herein, COWAY at its sole option will repair or replace the Product.

Decisions as to the extent of repair or replacement required will be made solely by COWAY.

The remedy under this Warranty is available only for that portion of the Product exhibiting defects at the time of the warranty claim. The replacement Product as well as any remaining original Product will be warranted only for the original two years warranty period. This limited warranty applies only to Product used for an application specified by COWAY for the Product and applied in strict accordance with COWAY published specifications in effect at the time of application. IF PRODUCT IS USED FOR OTHER THAN ITS INTENDED PURPOSE, IT IS SOLD AS IS AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

What This Warranty Does Not Cover:

This Warranty warrants that the Product will be free from manufacturing defects which affect the ability of the Product to operate for its intended use; it is not a warranty that the Product will never require repairs or to undertake responsibilities, liabilities or obligations other than those specifically identified in the preceding section. COWAY is not responsible or liable for personal injury or property damage of any kind, even if arising from a breach of this Warranty.

Limitations and Exclusions:

TO THE EXTENT PERMITTED BY APPLICABLE LAW, COWAY DISCLAIMS ANY OTHER WARRANTY EXPRESS OR IMPLIED, THAN THAT PROVIDED FOR HEREIN. THIS WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, GUARANTEES, CONDITIONS AND REPRESENTATIONS, EXPRESS

OR IMPLIED, ORAL OR WRITTEN, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY IMPLIED CONDITIONS OR WARRANTIES AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE COWAY PRODUCT.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

COWAY DOES NOT AUTHORIZE ANY PERSON INCLUDING ITS REPRESENTATIVES, TO MAKE ANY REPRESENTATION OR TO OFFER ANY WARRANTY, CONDITION OR GUARANTY IN RESPECT OF THE PRODUCT OTHER THAN THIS WARRANTY. THIS LIMITED WARRANTY SHALL BE THE OWNER'S SOLE AND EXCLUSIVE REMEDY AGAINST COWAY AND COWAY SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, EXEMPLARY, SPECIAL, INCIDENTAL OR OTHER DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, AND LOSS OF USE. INCIDENTAL, CONSEQUENTIAL AND EXEMPLARY DAMAGES SHALL NOT BE RECOVERABLE EVEN IF THE REMEDIES OR THE ACTIONS PROVIDED FOR IN THIS WARRANTY FAIL OF THEIR ESSENTIAL PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. COWAY SHALL NOT BE LIABLE FOR ANY DAMAGES WHICH ARE BASED UPON NEGLIGENCE, BREACH OF WARRANTY, STRICT LIABILITY OR ANY OTHER LEGAL THEORY OF LIABILITY OTHER THAN THE EXCLUSIVE LIABILITY SET FORTH IN THIS WARRANTY.

Limitations on Implied Warranties:

Any implied warranty of merchantability or fitness for a particular purpose or use, shall be limited to the duration of the foregoing express written warranty.

Conditions of Warranty:

COWAY's continuing liability under this Warranty is conditioned upon the following:

- The defect or damage is not caused by or is the result of: abnormal use or conditions; improper storage, unauthorized modifications or repair; misuse, neglect, accident, alteration, improper installation or other acts that are not the fault of Coway or the manufacturer of the product or that are not covered by the manufacturer's warranty;
- The Product has not been altered, modified or repaired without prior written approval of COWAY;
- The OWNER has notified COWAY in writing of any failure of the Product covered by this Warranty within thirty (30) days following such failure;
- There has been no misuse, abuse or negligence with respect to the Product on the part of the OWNER.

Waiver:

COWAY's failure at any time to enforce or rely upon any of the terms or conditions stated herein shall not be construed to be a waiver of its rights hereunder.

Obtaining Warranty Service and OWNER'S Duties:

If the Product fails to operate for its intended purpose, then notify COWAY or its Representative Agency, within 48 hours or within the next business day after discovery of any defect in the Product. The OWNER must give written notice to COWAY no later than thirty (30) days after a defect is discovered or should by reasonable diligence have been discovered. Claims under this Warranty will require proof of purchase by the OWNER.

COWAY
Add : Coway Co., Ltd. 136-23, Yugumagoksa-ro, Yugu-eup, Gongju-si, Chungcheongnam-do, Korea Tel.: +82-1588-5100


COWAY EU
Tel.: UK - London :+44 2032807197 GERMANY - Hamburg : +49 4087406758 FRANCE - Paris :+33 170120004 ITALY - Milan : +39 0236003045 SPAIN - Madrid : +34 911234181 Mail : info_eu@coway.com Web : de.coway.com

POLAND
Add : OPUS SP. z o.o. Toruńska 8, 44-122 Gliwice Tel.: +32 4201255 Mail : serwis@opus.pl

SWEDEN
Add : Albion Nordic AB Traktorgatan 2 745 37 Enköping Sweden Tel.: +46 171 66 33 00 Mail : info@albionnordic.com Web : www.albionnordic.com

TURKEY
Add : HAKMAN ELEKTRONİK SAN. VE TİC. A.Ş. Dikilitaş mahallesi Emirhan Cad. Barbaros Plaza İş Merkezi No:113 K.5 Beşiktaş / İSTANBUL Tel.: +90 212 217 11 60 Mail : info@hakman.com.tr Web : https://www.hakman.com.tr


Funktionshöjdpunkter

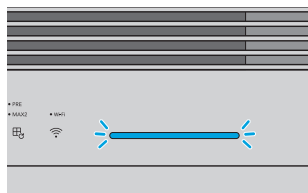

Övervakning av luftkvalitet i realtid

Airmegas utsläppssensor talar om inomhusluftens kvalitet i realtid. Den färgglada LED-baren visar varje minut av dagen om din inomhusluft är frisk eller ohälsosam. Dessutom klassificerar partikelsensorn partikelstorleken i PM10 och PM2.5, och baren visar nivån på luftkvaliteten.


► S. 19

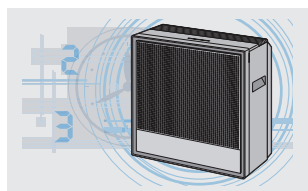

Smart läge

Med Smart Läge anpassar Airmega sig till sin omgivning. Fläkthastigheten justeras automatiskt baserat på rummets luftkvalitet och rumsförhållanden.

► S. 18

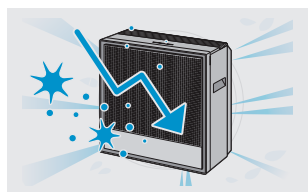

Snabbläge


Snabbt läge möjliggör snabbare rening inomhus. Produkten drivs med maximal prestanda tills luftkvaliteten sänks till nivå 1.



Ansluta luftrenaren till wifi-nätverket


(endast 250S)

Ta reda på programmets parningsguide med länken nedan: <https://iocare.coway.com/manual/eu/air/airmega250s.html>

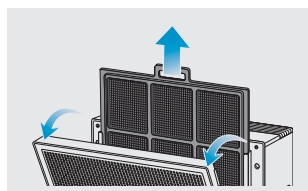

EZ bortkoppling

Coways unika öppna fronttyp applicerades på produkten för att enkelt kunna ta bort och sätt in ett ofta rengjort förfilter.

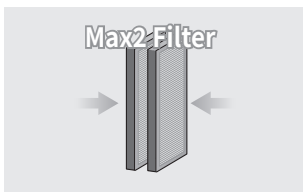

Max2 filter

Max2-filtret (ett aktivt kolfilter plus Green True HEPA-filter) reducerar mer än 99 % av flyktiga organiska föreningar (VOC), lukter som NH_3 , CH_3CHO , CH_3COOH . Den fångar också upp och minskar upp till 99,97 % av luftburna partiklar i luften såsom pollen, föroreningar och andra allergener

* Filtrets livslängd: Ungefär 12 månader (baserat på daglig 8 timmars användning vid maxhastighet)

► S. 4



Aviseringar om filtrets livstid


Med statusvarningar för Max2-filtret och förfiltret vet du när det är dags att byta ut dem. Och eftersom Airmega mäter hur mycket luft som har färdats genom den kan du vara säker på att aviseringarna är korrekta.

► S. 20

Snabbstartsguide

Innan du använder produkten måste du ta bort plastfolien från det insatta Max2-filtret. Se sidan 17 för mer information.

Använd inte produkten förrän du först har slutfört dessa steg.

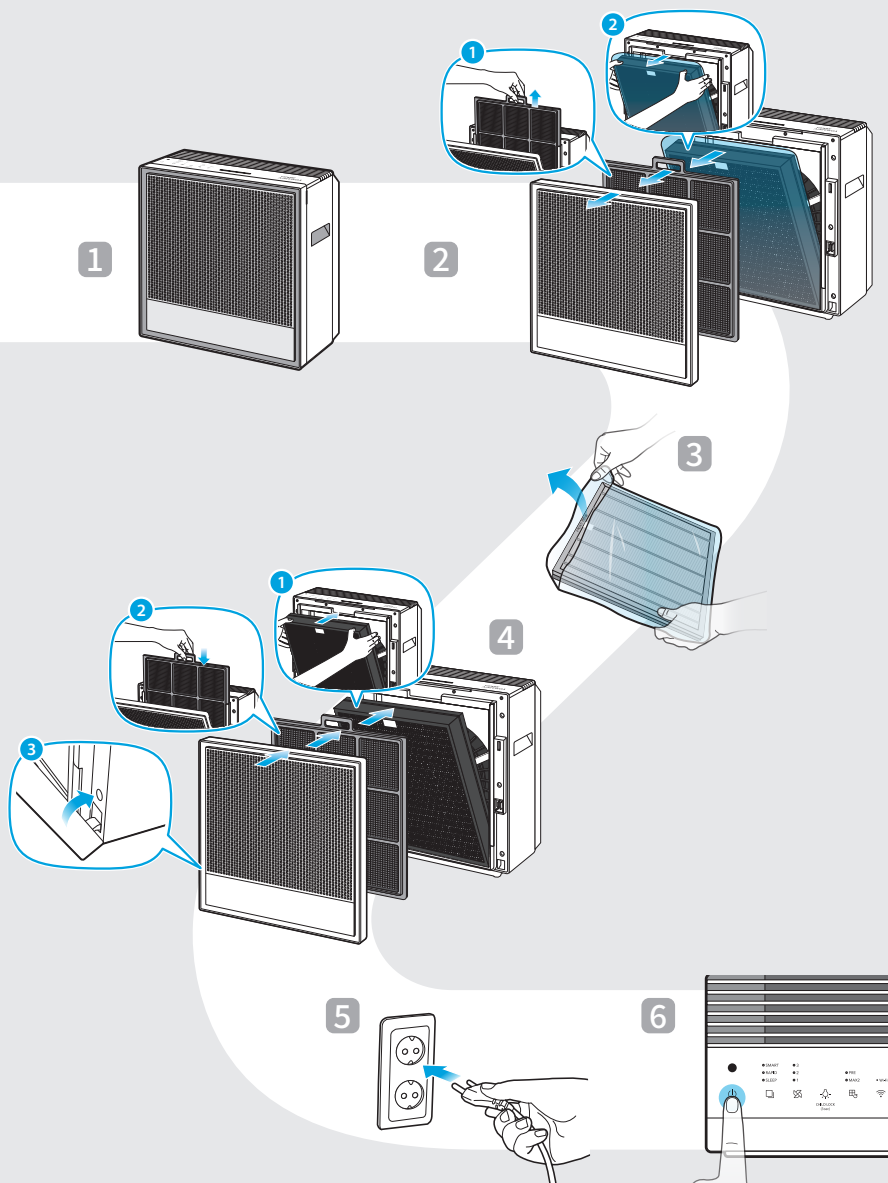

Ansluta luftrenaren till wifi-nätverket (endast 250S)


Ta reda på programmets parningsguide med länken nedan:

<https://iocare.coway.com/manual/eu/air/airmega250s.html>




Kontrollera produkten

Innan du installerar luftrenaren, se till att du har alla komponenter. Kontakta kundtjänst om några föremål saknas eller är skadade.

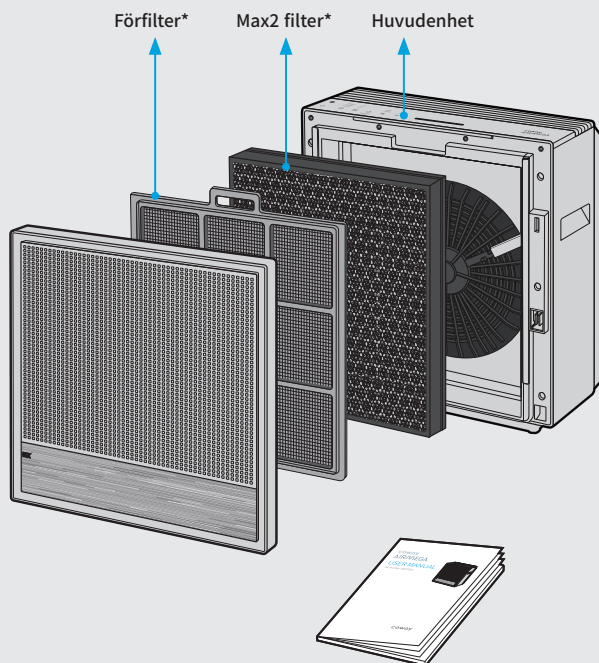

* Dessa är installerade i huvudenheten.

SE

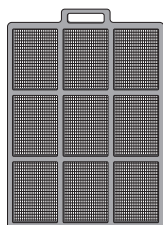

Förfilter

Fångar upp stora partiklar som hår, päls och damm med mikronät.



Max2 filter (aktivt kol + Green True HEPA)

Fångar upp och minskar mer än 99 % av VOC och lukter som NH_3 , CH_3CHO , CH_3COOH . Den fångar också upp och reducerar upp till 99,97 % av luftburna partiklar, allergener och föroreningar ner till 0,3 mikron i storlek.

Innehållsförteckning

01 INNAN DU ANVÄNDER PRODUKTEN	6
Symboler som används i denna handbok	6
Säkerhetsinstruktioner	7
02 FÖRBEREDELSE	12
Diagram över delar	12
03 INSTALLATION	15
Installera produkten	15
Ansluta strömmen och slå på luftrenaren	16
Ansluta luftrenaren till wifi-nätverket (endast 250S)	16
04 DRIFT	17
Smart läge – Auto	17
Smart läge – Viloläge	17
Smart läge – ECO	18
Snabbläge	18
Ställa in timern	18
Kontrollera luftkvaliteten	19
Justering av sensors känslighet	19
Visar meddelande om att luckan är öppen	20
Återställ den användarvalda cykeln för filterbyte	20
05 UNDERHÅLL	21
Filterunderhåll och rengöring av delar	21
Kontrollera wifi-anslutning och status	26
06 APPENDIX	28
Felsökning	28
Specifikation	29
Rättsliga meddelande	30
Begränsad garanti	32

Symboler som används i denna handbok

Följande symboler används i denna handbok för att förklara procedurer, begränsningar, försiktighetsåtgärder vid hantering och instruktioner som bör följas för din säkerhet.

VARNING

Varning indikerar en potentiellt farlig situation som kan resultera i dödsfall eller allvarlig skada på användaren eller andra.

FÖRSIKTIGHET

Försiktighet indikerar en potentiellt farlig situation som kan resultera i skada på användaren eller andra, eller förlust av egendom.

OBS

Observera anger användbara tips eller ytterligare information för procedurer och produktanvändning.

[]

Denna hak-parentes representerar kontrollknappar och indikatorer på produkten.

t.ex. [Power]

Säkerhetsinstruktioner

Läs och följ alla säkerhetstips och varningar innan du använder produkten.

VARNING

- Överskrid inte spänningen och märkeffekten för eluttaget eller anslutningsenheten. Detta kan generera överdriven värme och orsaka elektriska stötar eller brand.
- Använd endast lämplig typ av eluttag för produkten. Att ansluta produkten till ett felaktigt uttag kan leda till skada.
- Sänk inte ner produkten eller del därav i vatten. Använd endast produkten efter att en kvalificerad teknisk undersökning och byt ut de delar som var under vatten.
- Rör inte i nätkontakten med våta händer.
- Anslut inte produktens nätkontakt om eluttaget är vått. Vänta tills eluttaget torkat helt innan du använder det.
- Använd inte produkten om motorfläkten inte fungerar eller är skadad.
- Koppla bort nätkontakten från eluttaget om konstiga ljud, lukter eller rök kommer från produkten. Kontakta kundtjänst omedelbart för instruktioner.
- Dra ut nätkontakten ur eluttaget när produkten inte används och innan du rengör, inspekterar eller byter ut delar.
- Använd ett tillägnad eluttag för produkten. Anslut inte produkten till ett grenuttag som har anslutningar till flera andra produkter.
- Använd inte produkten om nätkontakten eller sladdarna är skadade.
- Böj, vrid, nyp eller skada inte nätsladden med våld.
- Tvinga inte in nätkontakten i ett felaktigt eluttag eller i ett löst eluttag. Kontakta en kvalificerad tekniker för att installera ett korrekt eluttag.

- En skadad stickkontakt eller sladd måste bytas ut av tillverkaren eller en kvalificerad tekniker
- Ta ut nätkontakten ur eluttaget genom att ta tag i kontakten och dra försiktigt i den. Dra aldrig i nätsladden för att flytta enheten.

Säkerhetsinstruktioner

Läs och följ alla säkerhetstips och varningar innan du använder produkten.

VARNING

- Håll den elektriska sladden borta från värmekällor.
- Reparera inte produkten om inte denna manual rekommenderar det. Om du gör det ogiltigförklaras din garanti. Allt reparationsarbete måste utföras av en kvalificerad tekniker.
- Denna produkt har en polariserad kontakt (det ena stiftet är bredare än det andra). För att minska risken för elektriska stötar är denna kontakt endast avsedd att passa i ett polariserat uttag på ett sätt. Om kontakten inte passar in helt i uttaget, vänd på kontakten. Om den fortfarande inte passar, kontakta en behörig elektriker. Försök inte att kringgå denna säkerhetsfunktion.
- Använd inte denna produkt i industriområden eller fabriker där olja, fett eller dammpartiklar kan förekomma. Denna produkt är endast avsedd för hushållsbruk.
- Byt inte filtret medan produkten är i drift. Stäng alltid av produkten och dra ur nätkontakten innan du vidrör komponenterna inuti produkten.
- Placera inte produkten nära en luftfuktare eller i fuktiga utrymmen, såsom badrum eller tvättstugor, där produkten kan komma i kontakt med vatten.
- Placera inte produkten nära brandfarliga gaser, cigaretter, rökelse och andra brännbara material.
- Placera inte produkten på en säng eller mot mjuka föremål, såsom gardiner.
- Rengör inte produkten med rengöringsmedel, thinner eller andra hushållslösningsmedel.
- Spraya inte insektsmedel eller brandfarliga material nära denna produkt.

FÖRSIKTIGHET

- Denna produkt bör inte användas av barn under 8 år utan tillsyn.
- Denna produkt får inte användas av personer med nedsatt fysisk, sensorisk eller mental förmåga eller bristande erfarenhet utan övervakning eller instruktioner om hur produkten används på ett säkert sätt och förstår de risker som är involverade.
- Låt inte barn leka med plastförpackningen och produkten.
- Använd inte denna produkt med någon fast hastighetskontrollanordning, eftersom det kan leda till elektriska stötar eller brand.
- Använd inte en adapter eller förlängningssladd, eftersom det kan orsaka brand, stötar eller personskada.
- Använd inte tillbehör eller filter som inte rekommenderas av tillverkaren.
- Var försiktig när du tar bort komponenterna från produkten. Se till att dina kroppsdelar inte fastnar eller repar när du servar produkten.
- För inte in några föremål eller fingrar i produktens öppningar. Om något föremål ramlar in i öppningarna, stäng omedelbart av produkten och dra ur nätkontakten. Kontakta en kvalificerad tekniker eller tillverkaren för att ta bort föremålet.
- Tvätta eller återanvänd inte Max2-filtret.
- Blockera inte produktens luftutlopp. Att göra det kan minska produktens effektivitet och öka risken för skador.
- Denna produkt är avsedd för hushållsbruk enligt beskrivningen i denna handbok. Användning i en industriell miljö eller någon annan plats som inte rekommenderas av tillverkaren kan leda till elektriska stötar, brand och personskador.
- Placera inte något ovanpå produkten.
- Dra inte nätsladden under mattor eller täck den med mattor.

- Byt filtren med rekommenderade intervaller så att överflödigt damm inte samlas.
- Placera inte produkten där båda sidorna av produkten är blockerade.
- Placera inte produkten i direkt solljus.
- Placera inte produkten nära eller i ett fönster.
- Placera produkten på en fast, plan och torr yta som ger tillräcklig luftcirkulation.
- Håll produkten och dess sladd ur vägen där den inte kan trampas på eller snubblas över.
- Slut användaren måste informeras om att hålla minst 20 cm avstånd från antennen medan denna slutprodukt installeras och används.
- Driften är föremål för följande två villkor: (1) den här enheten får inte orsaka skadliga störningar och (2) den här enheten måste acceptera alla mottagna störningar, inklusive störningar som kan orsaka oönskad funktion.


LÄS OCH SPARA DESSA INSTRUKTIONER

Diagram över delar

Kontrollera produktens delar (exteriör framifrån och ovanifrån och kontrollpanel) och hur de fungerar.

Utsida

Kontrollera delarna och funktionerna på produktens utsida.

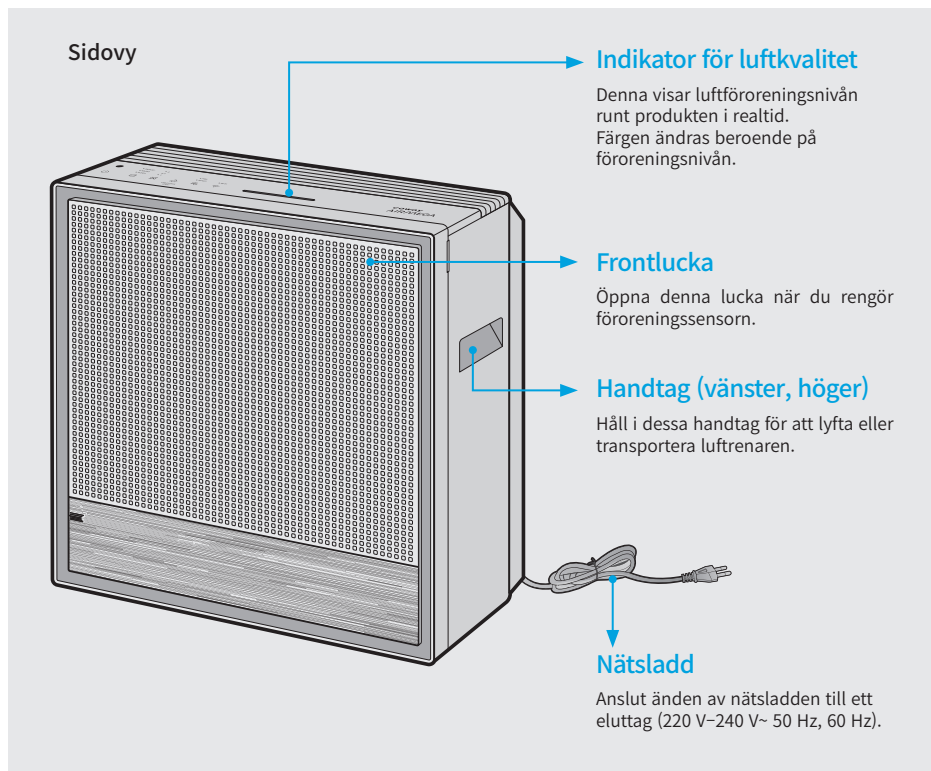

Ovanifrån


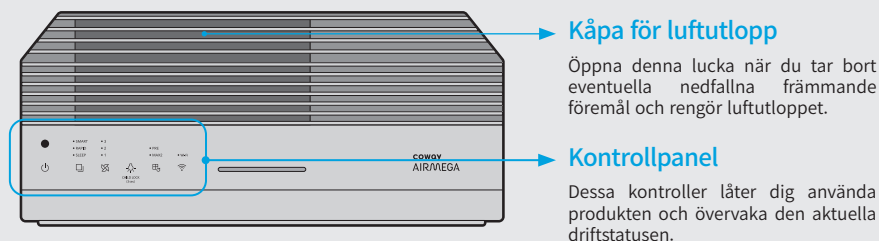



Diagram över delar

Kontrollera produktens delar (exteriör framifrån och ovanifrån och kontrollpanel) och hur de fungerar.

Kontrollpanel (250S)

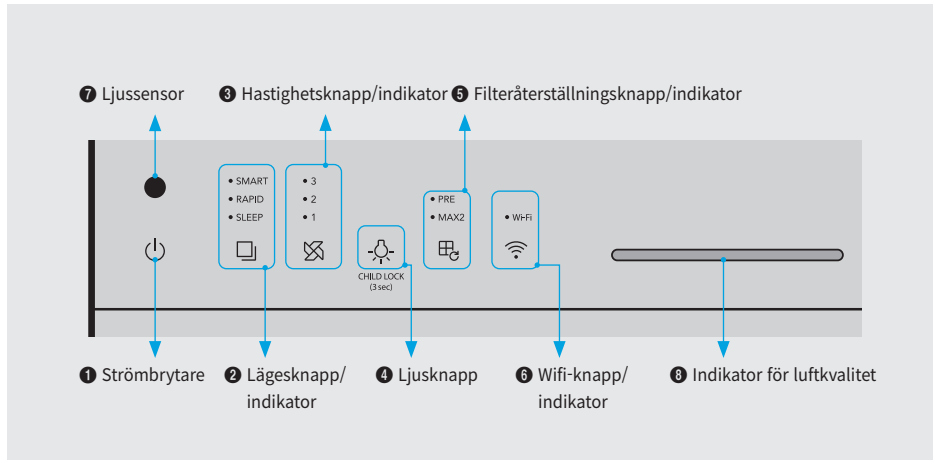

Kontrollpanel (250)

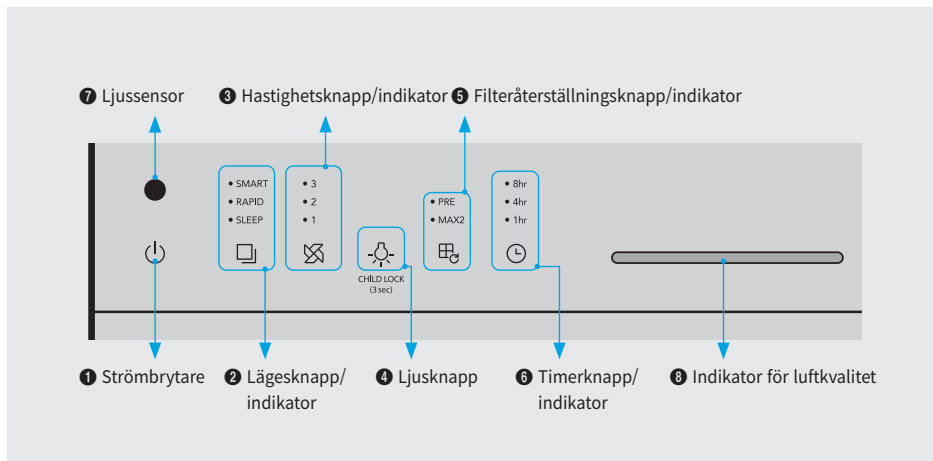

knapp/indikator



1 Strömbrytare

Använd knappen för att slå på och stänga av produkten.

– När du använder produkten för första gången körs den i Smart läge. Om du stänger av produkten under drift och slår på den igen, körs den i det läge som var aktivt innan produkten stängdes av.

- SMART
- RAPID
- SLEEP



2 Lägesknapp/indikator

Tryck på lägesknappen för att välja smart läge → snabbläge → viloläge.

- 3
- 2
- 1



3 Hastighetsknapp/indikator

Tryck på hastighetsknappen för att välja nivå 1 → nivå 2 → nivå 3. Indikatorn tänds när hastighetsnivå 1/nivå 2/nivå 3 är vald.



CHILD LOCK
(3 sec)

4 Ljusknapp

Använd den här knappen för att slå på och stänga av indikatorn och luftkvalitetsindikatorn. Om du trycker på [Light]-knappen medan alla indikatorer och luftkvalitetsindikatorn är påslagna, kan du slå på och av indikatorerna i följande ordning: Luftkvalitetsindikator av → alla indikatorer av → alla indikatorer på.

- PRE
- MAX2



5 Filteråterställningsknapp/indikator

När filterbytesindikatorn tänds, tryck på motsvarande knapp i mer än tre sekunder efter rengöring och utbyte av filter. Indikatorn fortsätter vara tänd under filterrengörings-/utbytescykeln. När rengöringscykeln eller livslängden blir mindre än 2 % kommer motsvarande indikator att avge ett orange ljus.

- Om båda indikatorerna (PRE och MAX2) tänds samtidigt, kan filtren återställas på en gång.
- Om filterbytesindikatorn inte är tänd, fungerar inte denna knapp.
- Om du har bytt ut eller reparerat filtret innan filterbytesindikatorn tändes, se sidan 21.
- Rengörings- och utbytescykeln för förfiltret och det kombinerade filtret rekommenderas och kan variera beroende på användningsmiljön.

- Wi-Fi



6 Wifi-knapp/indikator (endast 250S)

Klicka på wifi-knappen för att ansluta till ett wifi-nätverk. När du är ansluten till wifi kommer statusindikatorns lampa att tändas.

- 8hr
- 4hr
- 1hr



6 Timerknapp/indikator (endast 250)

Tryck på timer-knappen för att ställa in tiden.

7 Ljussensor

Denna sensor upptäcker ljus runt produkten.



8 Indikator för luftkvalitet

Denna indikator visar luftkvalitet inomhus i LED-färger. Bra (blå) → Måttlig (grön) → Ohälsosamt (gul) → Mycket ohälsosamt (röd)




Installera produkten

Innan du använder produkten måste du ta bort plastfolien från det insatta Max2-filtret.

⚠ FÖRSIKTIGHET

Se till att nätsladden är urkopplad innan du öppnar luckan.

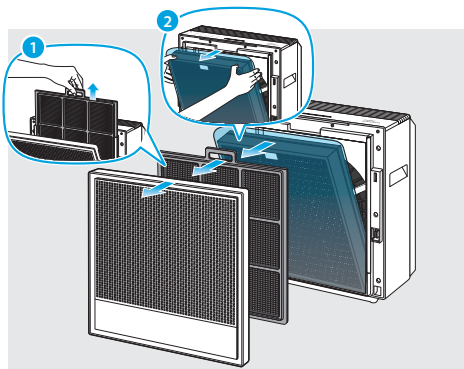

1 Öppna luckan som finns på framsidan av produkten.

Lucka ► Förfilter ► Max2 filter




2 Ta bort plastfolien på Max2-filtret.

Kassera plastfolien på Max2-filtret.

⚠ FÖRSIKTIGHET

- När du tar bort plastfolien från filtret, var försiktig så att du inte skadar filtrets yta.
- Låt inte barn leka med plastfolien.

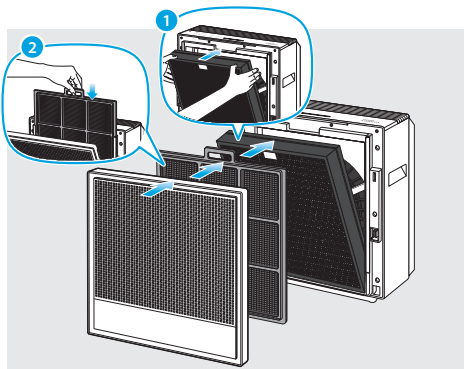

3 Sätt tillbaka filtret och luckan i omvänd ordning enligt första steget.

Max2 filter ► Förfilter ► Lucka

📌 OBS


- Placera Max2-filtret i filterhuset med den gröna sidan mot produkten. Omvänd placering kan påverka filtrets livslängd.
- Produkten kan inte startas om frontluckan inte är korrekt monterad.

Ansluta strömmen och slå på luftrenaren

När dina filter är förberedda ansluter du strömmen och sätter på luftrenaren.


⚠ FÖRSIKTIGHET

Den här produkten är endast för 220V~240V~ 50 Hz, 60 Hz. Se till att din strömkälla uppfyller dessa krav.

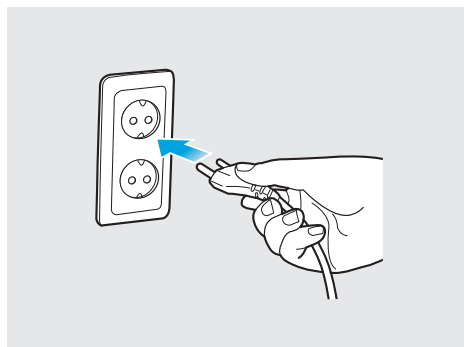



1 Anslut elkontakten till ett eluttag.

Indikatorerna på luftrenaren blinkar.

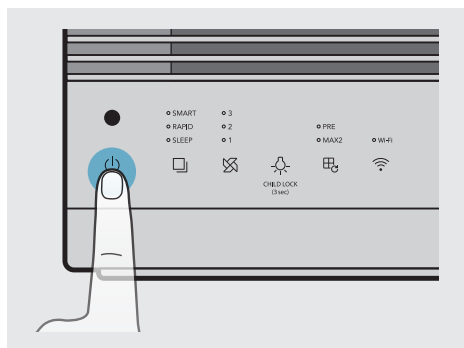

2 Tryck på [Power]-knappen för att slå på luftrenaren.

Du kommer att höra ett ringljud när luftrenaren börjar arbeta.

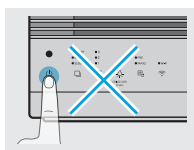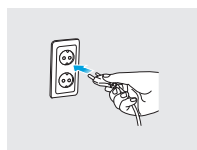

⚠ FÖRSIKTIGHET

- Rör inte vid kontrollpanelen när strömmen ansluts.
- Knappar kanske inte fungerar under en viss tid.
- Om knapparna inte fungerar, koppla ur nätsladden i cirka 10 minuter för att ladda ur och anslut den sedan igen.

Ansluta luftrenaren till wifi-nätverket (endast 250S)

Ta reda på programmets parningsguide med länken nedan:
<https://iocare.coway.com/manual/eu/air/airmega250s.html>




Smart läge – Auto

Om produkten är inställd på smart läge, justerar den automatiskt lufthastigheten enligt den aktuella luftkvaliteten runt produkten. Lufthastigheten justeras enligt tabellen nedan:

Luftkvalitet	Bra	Måttlig/ohälsosam	Väldigt ohälsosam
Lufthastighet	Nivå 1	Nivå 2	Nivå 3

250S/250

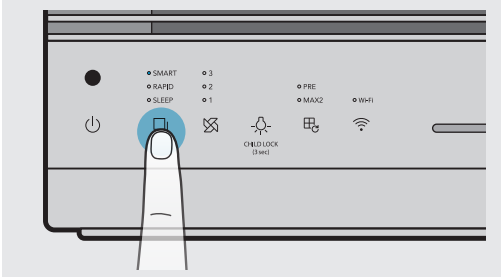


Tryck på [Mode]-knappen för att välja smart läge.

Smart läge – Viloläge

Om produkten är inställd på smart läge aktiveras viloläget automatiskt så att det kan minska brus och strömförbrukning. Det aktiveras när rummet är mörkt och luftkvaliteten är bra (nivå 1) i 3 minuter.

Om ljussensorn känner av ljus i 5 minuter eller längre och/eller om luftkvalitetsnivån i rummet är måttlig (nivå 2) eller sämre. Smarta läget aktiveras automatiskt.

250S/250

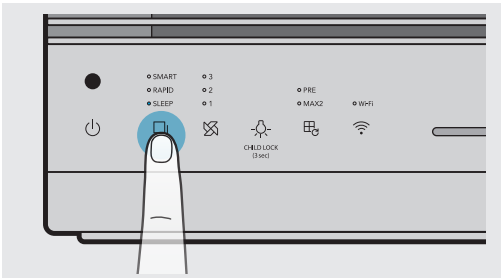


Tryck på [Mode]-knappen för att välja viloläge. Detta läge minimerar hastigheten under drift för en tyst och trevlig miljö.

Smart läge – ECO

När den är inställd på smart läge och om föroreningsnivån fortsätter vara **Bra** (nivå 1) i mer än 10 minuter stannar fläkten automatiskt för att spara energi. Om produkten upptäcker luftföroreningar kommer fläkten automatiskt att starta om igen.

Om föroreningsnivån fortsätter vara Bra (nivå 1) i mer än 10 minuter i smart läge, stannar fläkten automatiskt för att spara energi.

Om produkten upptäcker luftföroreningar startar fläkten automatiskt om. Om ECO-läget bibehålls i 30 minuter kommer fläkten också att starta om. Om föroreningsnivån fortsätter vara Bra i mer än 10 minuter efter omstart kommer ECO-läget att aktiveras igen.

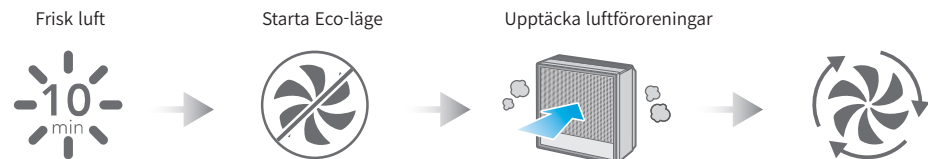


Snabbläge

Tryck på [Mode]-knappen för att välja snabbläge. När luftkvaliteten hålls på nivå 1 i mer än 5 minuter, växlar den till smart läge. När produkten fortsätter att arbeta i mer än maximalt 60 minuter, växlar den till smart läge.

– Den maximala fläkthastigheten i snabbläge är densamma som nivå 3.


250S/250

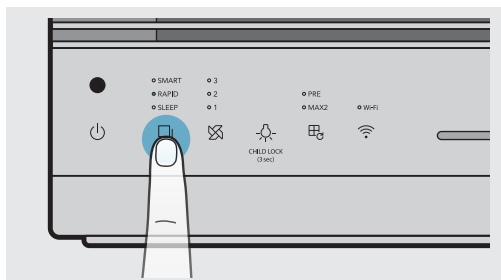

Ställa in timern


Du kan ställa in produkten så att den stängs av automatiskt efter en timme, 4 timmar eller 8 timmar. Använd den här funktionen för att spara energi när du går hemifrån eller går och lägger dig.

250S

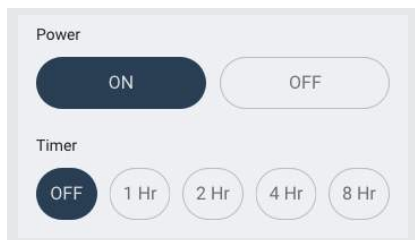

För 250S-användare; du kan ställa in timern och schemaläggaren med Airmega-applikationen.

250

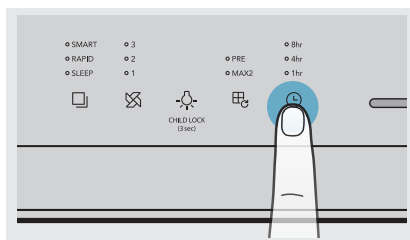

Klicka på [Timer]-knappen tills indikatorlampan visar önskad tid.


Kontrollera luftkvaliteten

Du kan enkelt kontrollera den aktuella luftkvaliteten runt produkten med hjälp av luftkvalitetsindikatorn på produktens framsida.

OBS

För 250S/250-användare; du kan också kontrollera den aktuella luftkvaliteten via applikationen på din smarta telefon.

Indikator för luftkvalitet

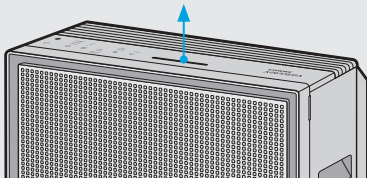


Indikator för luftkvalitet

Denna indikator visar luftkvalitet inomhus i LED-färger.

Bra (blå) → Måttlig (grön) → Ohälsosamt (gul) → Mycket ohälsosamt (röd)

Justering av sensorns känslighet


Du kan justera föroreningssensorns känslighet.

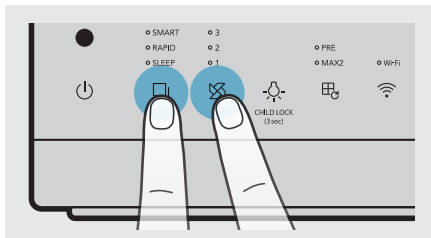

- 1 Medan produkten är i drift, tryck på [Mode]-knappen och [Speed]-knappen samtidigt i mer än 2 sekunder.


Hastighetsindikatorn blinkar för att visa den aktuella sensorns känslighetsnivå.

•Sensorns initiala känslighet är på normal nivå.

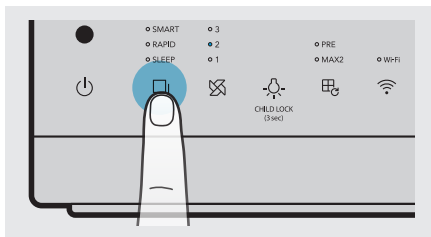

- 2 Tryck på [Mode]-knappen för att justera den till önskad känslighet. Lägesindikatorn blinkar enligt nedan när sensorkänslighet har valts.

	1	2	3
Känslighet	Känslig	Normal	Mindre känslig

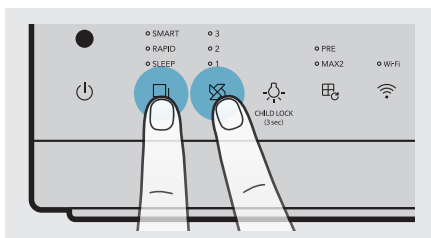


- 3 Tryck på [Mode]-knappen och [Speed]-knappen samtidigt i mer än cirka 2 sekunder, den valda känsligheten kommer att matas in och produkten börjar arbeta normalt.

•Om [Speed]-knappen inte trycks in under 10 sekunder, ställs den valda känsligheten för sensorn in automatiskt.

Visar meddelande om att luckan är öppen


När du öppnar luckan medan du använder produkten

När det upptäcks att frontluckan är öppen i mer än 2 sekunder släcks alla indikatorer och produkten stoppar all drift. När det upptäcks att frontluckan är stängd i mer än 1 sekund återgår produkten till föregående driftläge.

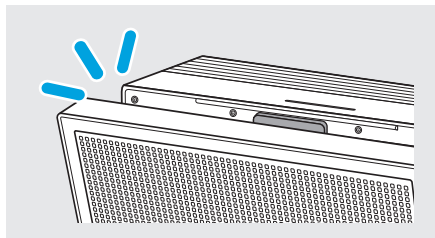

Återställ den användarvalda cykeln för filterbyte

Denna instruktion är en guide för nästa filterbyte. Filterbytes- och rengöringscykeln som väljs av användaren när användaren byter ut eller rengör ett filter själv innan meddelandet om filterbyte visas.

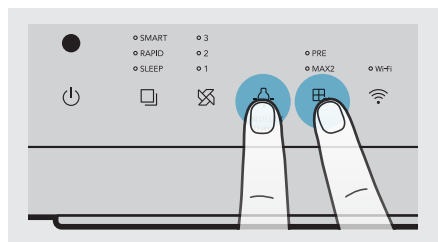

- 1 Tryck på [Filter reset]-knappen och [Light]-knappen samtidigt i mer än 2 sekunder.




- 2 Indikatorn för förfilter börjar blinka. Tryck sedan på [Filter reset]-knappen för att välja det filter som behöver bytas ut eller rengöras. Om du trycker på [Filter reset]-knappen i mer än 2 sekunder, återställs det valda filteralternativet.

- Ett filter väljs i följande ordning. Förfilter → max2 filter → förfilter & max2 filter → förfilter
- Om du inte återställer filtret och trycker på knappen [Light] och [Filter reset] igen samtidigt i mer än 2 sekunder, eller om du inte trycker på [Mode]-knappen eller [Filter reset] knappen i 10 sekunder, avbryts filtret automatiskt.

OBS

- Om du bytte ut eller hanterade filtret innan ett filterbyteslarm visas, återställ filterbytescykeln med den användarvalda funktionen för återställning av filterbytescykeln.
- Justering av luftkvalitetssensorns känslighet och återställning av den användarvalda filterbytescykeln har samma start- och avbrytningsmetod.

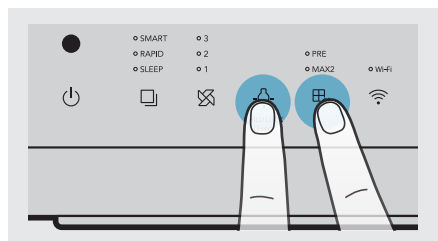

Filterunderhåll och rengöring av delar

Rengör förfiltret och varje del av huvudenheten och byt ut Max2-filtret regelbundet för optimal prestanda. Följande tabeller visar den rekommenderade underhållscykel för filter och rengöringscykeln för varje del.

Filterunderhåll	Underhållscykel
Förfilter*	Rengöring av filtren när filterindikatorn är på**
Max2 filter*	Byta filtren när filterindikatorn är på***

* Efter rengöring eller byte av filter, se till att återställa filterindikatorn på kontrollpanelen. (S.20)

** 250S : Ungefär 2 veckor (baserat på daglig 8 timmars användning vid maxhastighet) Filterrengöringscykeln kan justeras i applikationen på smartphone.

250 : Ungefär 2 veckor (baserat på daglig 8 timmars användning vid maxhastighet)

*** Ungefär 12 månader (baserat på daglig 8 timmars användning vid maxhastighet)

Filtrets livslängd kan variera beroende på produktens verkliga gångtid och fläkthastigheten. Siffrorna ovan är utvärderade på ett allmänt underlag.

Rengöring av delar	Rengöringscykel
Frontlucka	Var 2:e månad (rekommenderas)
Luftutlopp	
Föroreningssensor	


⚠ FÖRSIKTIGHET

- Se till att stänga av strömmen och koppla ur strömkontakten innan du rengör varje del eller byter ut Max2-filtret.
- Använd inte rengöringsmedel som innehåller lösningsmedel, thinner, blekmedel, klor eller slipmedel.
- Sänk inte ner produkten i vatten eller spraya den med vatten.
- Om du använder vatten för att rengöra förfiltret, torka förfiltret i skuggan innan du sätter tillbaka det.

📌 OBS

- Om du använder produkten i en förorenad miljö, rengör varje del eller byt ut Max2-filtret oftare än den rekommenderade cykeln.
- Användning av ett Airmega originalfilter rekommenderas för optimal prestanda.
- Max2-filtret kan inte återanvändas. Försök inte rengöra dem med vatten. Byt alltid ut dem mot ett nytt.
- Följ dina lokala föreskrifter när du kasserar det gamla Max2-filtret.

Utsida

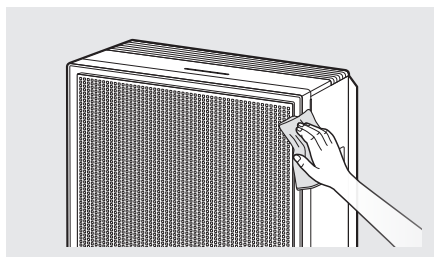


Torka av produktens utsida med en mjuk torr trasa.

När utsidan är smutsig, använd en lätt fuktig trasa.


Förfilter

När [Pre Wash]-indikatorn lyser, rengör förfiltret på framsidan. Följ anvisningarna nedan när du rengör filtret.

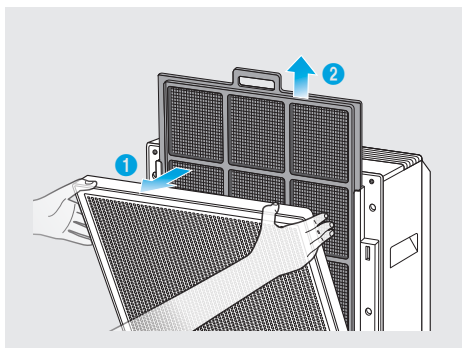

1 Öppna frontluckan genom att dra ut den övre delen.

2 Dra förfiltret uppåt för att ta ut det.
– Se till att damm inte faller av när det dras ut.

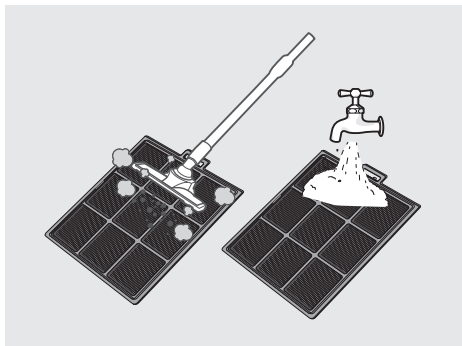


3 Ta bort damm med en dammsugare eller vatten beroende på föroreningsgraden.

– Var försiktig så att inte damm ramlar in i produkten vid rengöring.

⚠ FÖRSIKTIGHET

Om du använder vatten för att rengöra förfiltret, torka förfiltret i skuggan innan du sätter tillbaka det.

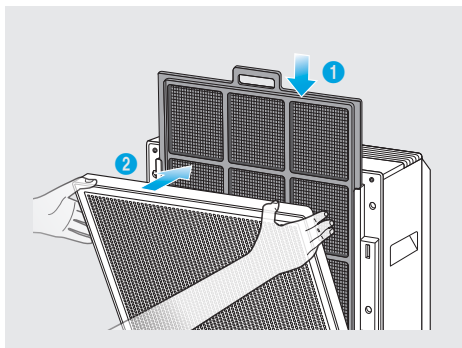

4 Tryck in det torkade förfiltret i produkten så långt som möjligt för att installera. Stäng sidoluckan igen.

– När du monterar förfiltret, trycker du in hakarna helt på båda sidor.

– Och tryck och håll nere [Filter reset]-knappen, se sidan 14.


Max2 filter

Hur du byter ut Max2-filter

Se sida 15. Och tryck och håll nere [Filter reset]-knappen, se sidan 14.


Frontluckor

Rengör de främre luckorna ofta för optimal prestanda. Följ anvisningarna nedan när du rengör luckorna.

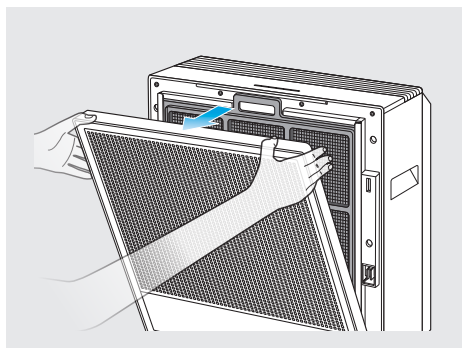


1 Ta bort frontluckorna

•Lyft och dra i den övre delen av frontluckan för att ta bort den.

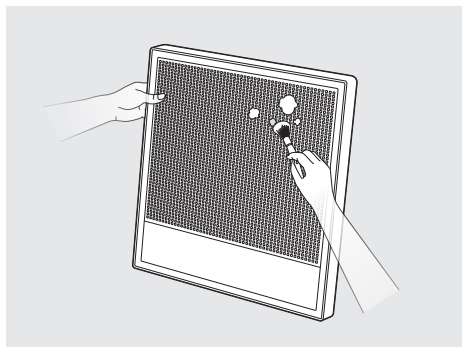

2 Ta bort damm med en mjuk, torr trasa eller borste.

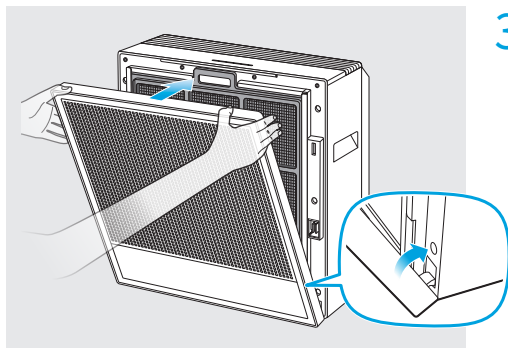


3 Montera luckan i spåren längst ner på produkten och tryck luckan på plats.

OBS


Produkten kommer inte att kunna startas om höger och vänster lucka är felaktigt installerade.

Luftutlopp

Rengöring av det löstagbara luftutloppet och gallret

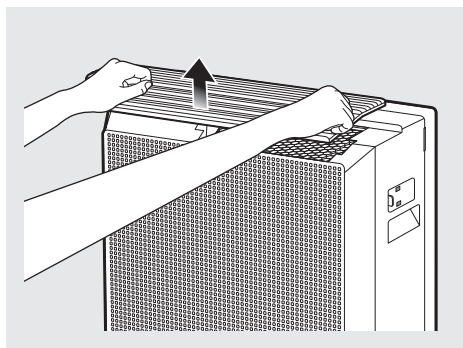

- 1 Lyft upp det löstagbara luftutloppsgallret som är monterat ovanpå luftutloppet.

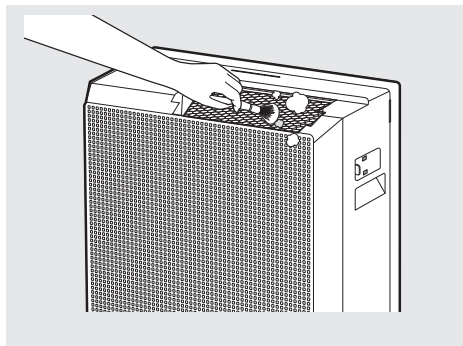


- 2 Rengör gallret och luftutloppet med en mjuk borste eller dammsugare.

•Låt inte damm ramla in i luftutloppet när du rengör det.


Föroreningssensor

Rengör föroreningssensorn ungefär var 2:e månad för optimal prestanda. Följ anvisningarna nedan när du rengör det.

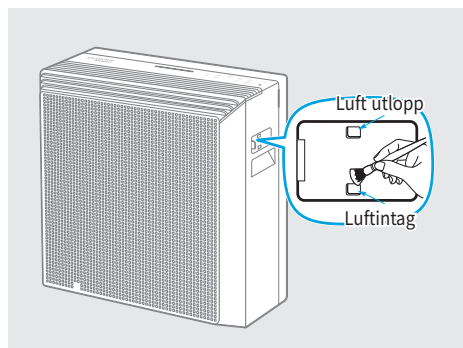


- 1 Använd en mjuk borste eller en dammsugare för att rengöra luftkvalitetssensorns luftintag och luftutlopp.

•Var försiktig så att inte damm ramlar in i produkten vid rengöring.

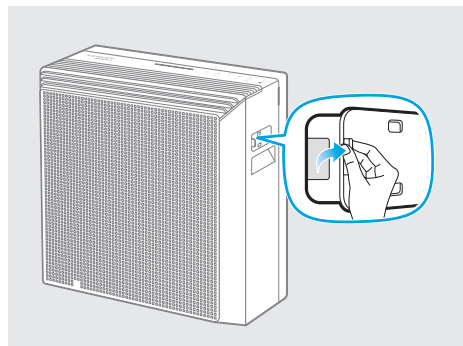

- 2 Öppna luftkvalitetsaensorns lucka på höger sida av produkten. (genom att använda hålet på luftkvalitetssensorns lucka.)

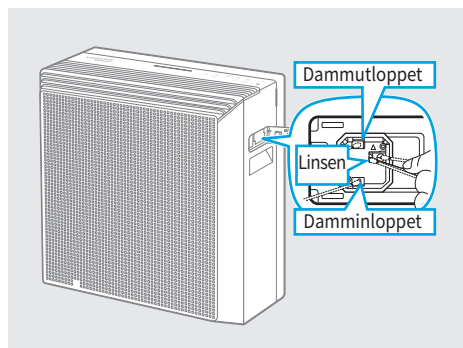


- 3 Blöt en bomullspinne lätt och rengör linsen, damminloppet och dammutloppet. Rengör dem med en torr bomullstuss för att ta bort den återstående fukten.

OBS

Utan regelbunden rengöring försämrar luftkvalitetssensorns prestanda.

När du använder produkten i en dammig miljö, rengör sensorn oftare.


Kontrollera wifi-anslutning och status

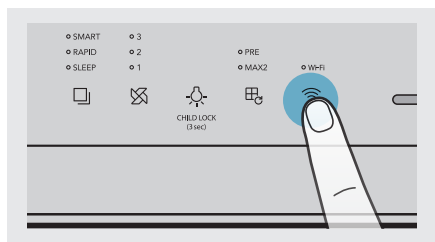


Ansluta luftrenaren till wifi-nätverket

Programmets parningsguide hittar du på länken nedan: <https://iocare.coway.com/manual/eu/air/airmega250s.html>


Om den visas enligt nedan när du ansluter till wifi, se följande.

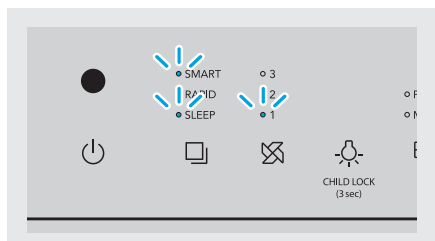

- 1 När den trådlösa routeranslutningen nekas kommer indikatorerna över smart, viloläge och hastighetsnivå 1 att blinka.

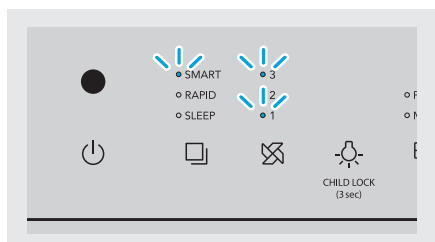

- 2 När den trådlösa routersökningen fortsätter i 1 minut (TIME OUT-status), blinkar indikatorerna för smart, hastighetsnivå 1 och hastighetsnivå 3.

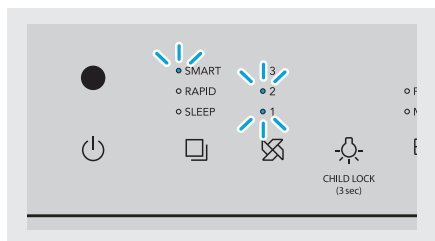


- 3 Om det inte kommer något svar från den trådlösa routern kommer indikatorerna för smart, hastighetsnivå 1 och hastighetsnivå 2 att blinka.

Om den visas enligt nedan när du ansluter till wifi, se följande.

OBS

1. Kontrollera strömmen på den trådlösa routern.
2. Kontrollera att du kan ansluta till Internet via den trådlösa routerns wifi.
3. Om den trådlösa routern fungerar korrekt ansluter produkten automatiskt till det wifi som produkten har varit ansluten till tidigare.
4. Om produkten inte ansluter automatiskt efter en viss tid, använd loCare-appen för att återansluta.
5. Om produkten aldrig har varit ansluten till wifi, eller om wifi-namnet/lösenordet har ändrats, anslut via loCare-appen.

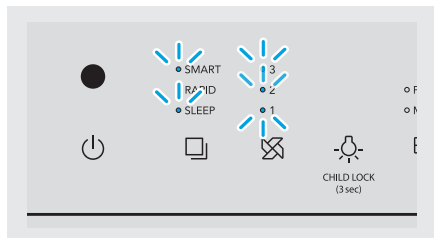


4 Om anslutningen förloras eller anslutningen avbryts när det inte finns något serversvar, blinkar indikatorerna för smart, viloläge och hastighetsnivå 1/2/3.

Detta är ett nätverks- eller serverfel som kan uppstå tillfälligt. Efter en viss tid ansluts servern korrekt (automatisk återanslutning). Om ovanstående fenomen kvarstår även efter en viss tid följer du instruktionerna nedan.

OBS

1. Kontrollera först att internet är tillgängligt med motsvarande wifi och nätverk. (I händelse av nätverksfel är det svårt att ange den tid som krävs för att ansluta till servern.)
2. Om meddelandet ovan fortsätter att visas på produkten medan wifi-lampan blinkar återansluter du via loCare-appen.
3. Om problemet kvarstår efter detta, kontakta kundtjänst (1-800-285-0982). Onormala avslutningsfel (vid tillfälligt strömavbrott eller återanslutning omedelbart efter att strömkontakten tagits ur) kan uppstå vid återanslutning till servern. Anslut i så fall igen om 5 minuter efter att du tagit bort nätsladden.

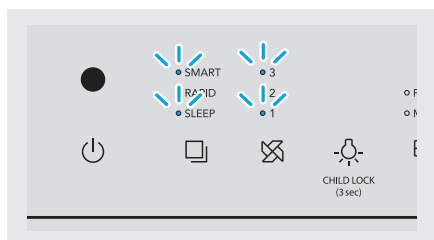

5 Om den trådlösa routerns krypteringsinformation är inkonsekvent kommer indikatorerna för smart, viloläge, hastighet 1 och hastighet 3 att blinka. Du måste kontrollera den trådlösa routerns lösenord. Kontrollera lösenordet och försök igen med wifi-anslutningen.

Felsökning

Försök med följande lösningar innan du kontaktar kundtjänst. All annan service ska utföras av ett auktoriserat Airmega servicecenter.

Ingen luft kommer ut från luftutloppet.

Kontrollera	Är nätkontakten ansluten?
Lösning	Anslut nätsladden till ett eluttag (220V~240V~ 50 Hz, 60 Hz).
Kontrollera	Är alla indikatorer avstängda?
Lösning	Tryck på [Power]-knappen för att starta produkten.
Kontrollera	Har det inträffat strömavbrott?
Lösning	Vänta tills strömmen är återställd och försök sedan använda produkten.

Lufthastigheten från luftutloppet är avsevärt låg.

Kontrollera	Har cykeln för rengöring och utbyte av filter passerat?
Lösning	Bekräfta cykeln för rengöring och utbyte av filtret och rengör eller byt sedan ut filtret vid behov. (S. 22, S. 23)

Föroreningsnivån ändras inte.

Kontrollera	Är föroreningssensorns lins förorenad?
Lösning	Rengör linsen på föroreningssensorn. (S. 25)
Kontrollera 1	Förblir föroreningsnivån "Mycket ohälsosam" efter att luftrenaren har använts i mer än två timmar?
Kontrollera 2	Förblir föroreningsnivån "Bra" i mer än en timme när luftrenaren används i en förorenad miljö?
Lösning	Justera föroreningssensorns känslighet. (S. 19)

Det kommer dålig lukt från luftutloppet.

Kontrollera	Har cykeln för rengöring och utbyte av filter passerat?
Lösning	Bekräfta cykeln för rengöring och utbyte av filtret och rengör eller byt sedan ut filtret vid behov. (S. 22, S. 23)

* Angående Airmega app-felsökning, besök www.cowaymega.com för mer information.

Specifikation

Det kan förkomma små ändringar i specifikationerna för att förbättra produktens prestanda.

Artikel	Specifikation	
Modellnamn	Airmega 250S	Airmega 250
Täckning	930 ft² (86 m²)* 465 ft² (43 m²)**	
Filter	Tvättbart förfilter + Max2 filterset (aktivt kol + Green True HEPA)	
Märkspänning	220V – 240V~ 50 Hz, 60 Hz	
Effekt	64 W	
Vikt	20,5 lb (9,3 kg)	
Storlek (BxDxH)	47,0 x 20,4 x 50,1 cm (18,5 x 8,03 x 19,7 tum)	

Det kan förkomma små ändringar i specifikationerna för att förbättra produktens prestanda.

Den rekommenderade användningsarean och den maximala luftvolymen är mätresultat i Turbo-läge och i normalt cirkulationsläge.

FCC's utlåtande om strålningsexponering

Denna utrustning överensstämmer med FCC:s strålningsexponeringsgränser för strålning som anges för en okontrollerad miljö. Denna utrustning bör installeras och användas med ett minsta avstånd på 20 cm mellan radiatorn och din kropp.

Alla ändringar eller modifieringar som inte uttryckligen godkänts av tillverkaren kan ogiltigförklara användarens rätt att använda denna utrustning.

Denna utrustning överensstämmer med IC RSS-102 exponeringsgränser för strålning som anges för en okontrollerad miljö. Denna utrustning bör installeras och användas med ett minsta avstånd på 20 cm mellan radiatorn och din kropp.

Alla ändringar eller modifieringar som inte uttryckligen godkänts av tillverkaren kan ogiltigförklara användarens rätt att använda denna utrustning.

Denna enhet överensstämmer med Industry Canadas licensbefriade RSS-standard(er). Driften är föremål för följande två villkor: (1) den här enheten får inte orsaka skadliga störningar och (2) den här enheten måste acceptera alla mottagna störningar, inklusive störningar som kan orsaka oönskad funktion.

Denna klass B digitala apparat överensstämmer med kanadensiska ICES-003.

IC-utlåtande

Denna klass B digitala apparat överensstämmer med kanadensiska ICES-003.

Denna enhet överensstämmer med Industry Canadas licensbefriade RSS-standard(er).

Driften är föremål för följande två villkor: (1) denna enhet får inte orsaka störningar, och (2) denna enhet måste acceptera alla störningar, inklusive störningar som kan orsaka oönskad funktion av enheten.

Alla ändringar eller modifieringar som inte uttryckligen godkänts av tillverkaren kan ogiltigförklara användarens rätt att använda denna utrustning.

Denna enhet och dess antenn(er) får inte placeras eller användas tillsammans med någon annan antenn eller sändare.

För produkter som är tillgängliga på marknaden i USA/Kanada kan endast kanal 1~11 användas. Val av andra kanaler är inte möjligt.

Enheten kan automatiskt avbryta överföring i händelse av frånvaro av information att överföra, eller funktionsfel. Observera att detta inte är avsett att förbjuda överföring av kontroll- eller signaleringsinformation eller användning av upprepade koder där det krävs av tekniken.

Enheten för bandet 5 150–5 250 MHz är endast avsedd för inomhusbruk för att minska risken för skadlig interferens på mobila satellitsystem i samma kanaler.

Den maximala tillåtna antennförstärkningen (för enheter i banden 5 250–5 350 MHz och 5 470–5 725 MHz) för att överensstämma med EIRP-gränsen.

Den maximala antennförstärkningen som tillåts (för enheter i bandet 5 725–5 825 MHz) för att överensstämma med de EIRP-gränser som specificeras för punkt-till-punkt och icke-punkt-till-punkt-drift som är lämpligt. Högeffektradarer tilldelas som primära användare (vilket betyder att de har prioritet) av banden 5 250–5 350 MHz och 5 650–5 850 MHz och dessa radarer kan orsaka störningar och/eller skada på LE-LAN-enheter.

Enheter kan inte sända i bandet 5 600–5 650 MHz. Denna begränsning är till för att skydda Environment Canadas väderradarer som arbetar i detta band.

Rättsliga meddelande

VIKTIG NOTERING:

Utlåtande om IC-strålningsexponering

Denna utrustning överensstämmer med IC RSS-102 exponeringsgränser för strålning som anges för en okontrollerad miljö. Denna utrustning bör installeras och användas med ett minsta avstånd på 20 cm mellan radiatorn och din kropp.

Meddelande om sändningsantenn

Denna radiosändare [IC: 12641A-WFM5SFP2501] har godkänts av Innovation, Science and Economic Development Canada för att fungera med de antenntyper som anges nedan, med den maximalt tillåtna förstärkningen angiven. Antenntyper som inte ingår i den här listan och som har en förstärkning som är större än den maximala förstärkningen som anges för någon typ i listan är strängt förbjudna att använda med denna enhet.

Antennlista (typ, maximal förstärkning (dBi))

Modell	Typ	Maximal förstärkning (dBi)
INNO-APC-0309	PCB-mönsterantenn	- 2 400 ~ 2 483,5 MHz : 2±1 (dBi) - 5 150 ~ 5 875 MHz : 3±1 (dBi)

GARANTIKORT ELLER GARANTIBREV TVÅ ÅRS BEGRÄNSAD GARANTI LUFTRENARE 250/250S ("PRODUKT")

Modell:

Serienummer:

Köparens namn:

Inköpsdatum:

("ÄGARE")

Vad denna garanti täcker:

Från och med inköpsdatumet för Produkten och fortsätter under en period av två (2) år. Om tillverkningsfel i Produkten orsakar att Produkten inte fungerar som den ska för den avsedda användningen, med förbehåll för de undantag, villkor och begränsningar som finns här, reparerar COWAY eller byter ut Produkten efter eget val. Beslut om omfattningen av den reparation eller utbyte som krävs kommer endast att fattas av COWAY.

Åtgärden enligt denna Garanti är endast tillgänglig för den del av produkten som uppvisar defekter vid tidpunkten för garantianspråket. Ersättningsprodukten samt alla återstående originalprodukter garanteras endast under den ursprungliga garantiperioden på två år. Denna begränsade garanti gäller endast för Produkter som används för en tillämpning som anges av COWAY för Produkten, och tillämpas i strikt överensstämmelse med COWAY publicerade specifikationer som gällde vid tidpunkten för ansökan. OM PRODUKT ANVÄNDAS FÖR ANNAT ÄN DET AVSEDDA SYFTET HAR DEN SÅLT SOM DEN SOM ÄR OCH UTAN NÅGRA UTTRYCKLIGA ELLER UNDERFÖRSTÅDDA GARANTIER, INKLUDERANDE SÄLJBARHET ELLER LÄMPLIGHET FÖR ETT SÄRSKILT SYFTE.

Vad denna Garanti inte täcker:

Denna Garanti garanterar att Produkten är fri från tillverkningsfel som påverkar Produktens förmåga att fungera för den avsedda användningen; det är inte en garanti att Produkten aldrig kommer att kräva reparationer, eller ta ansvar, skyldigheter eller förpliktelser än de som specifikt anges i föregående avsnitt. COWAY är inte ansvarig eller skyldig för personskada eller skada på egendom av något slag, även om det härrör från ett brott mot denna Garanti.

Begränsningar och undantag:

I DEN MÅN DET ÄR TILLÅTET ENLIGT GÄLLANDE LAG, FRÅNSÄGER SIG COWAY ALLA ANDRA GARANTIER UTTRYCKLIGA ELLER UNDERFÖRSTÅDDA, ÄN DEN SOM AVSES HÄR. DENNA GARANTI FÖLJER OCH EXKLUDERAR ALLA ANDRA GARANTIER, LÖFTEN, VILLKOR OCH UTFÄSTELSER, UTTRYCKLIGA ELLER UNDERFÖRSTÅDDA, MUNTligt ELLER SKRIFTLIGT, LAGSTADGADE ELLER ANDRA, INKLUDERAT MEN INTE BEGRÄNSAT TILL NÅGRA UNDERFÖRSTÅDDA VILLKOR ELLER GARANTIER FÖR SÄLJBARHET ELLER LÄMPLIGHET FÖR ETT SÄRSKILT SYFTE MED COWAY-PRODUKTEN. VISSA STATER TILLÅTER INTE BEGRÄNSNINGAR FÖR HUR LÅNGE EN UNDERFÖRSTÅDD GARANTI VARAR, SÅ OVANSTÅENDE BEGRÄNSNING KANSKE INTE GÄLLER FÖR DIG.

COWAY AUKTORISERAR INTE NÅGON PERSON INKLUSIVE DESS REPRESENTANT, ATT GÖRA NÅGRA UTFÄSTELSER ELLER ERBJUDA NÅGON ANNAN GARANTI, VILLKOR ELLER LÖFTE AVSEENDE PRODUKTEN ÄN DENNA GARANTI. DENNA BEGRÄNSADE GARANTI ÄR ÄGARENS ENDA OCH EXKLUSIVA ÅTGÄRD MOT COWAY, OCH COWAY FÅR INTE HÅLLAS ANSVARIG FÖR FÖLJDSKADOR, SPECIELLA, OAVSIKTLIGA ELLER ANDRA SKADOR INKLUDERANDE, MEN INTE BEGRÄNSADE TILL, FÖRLORAD VINST OCH FÖRLUST AV ANVÄNDNING. OAVSIKTLIGA, FÖLJD- OCH EXEMPLARANDE SKADOR ÄR INTE ERSÄTTNINGSGILLA ÄVEN OM RÄTTELSE ELLER ÅTGÄRDER SOM GÄLLER I DENNA GARANTI MISSAR I DESS VÄSENTLIGA SYFTE. VISSA STATER TILLÅTER INTE UNDANTAG ELLER BEGRÄNSNING AV OAVSIKTLIGA- ELLER FÖLJDSKADOR, SÅ OVANSTÅENDE BEGRÄNSNING ELLER UNDANTAG KANSKE INTE GÄLLER FÖR DIG. COWAY KAN INTE HÅLLAS ANSVARIG FÖR NÅGRA SKADOR SOM BASERAS PÅ VÅRDSLÖSHET, GARANTIBROTT, STRIKT ANSVAR ELLER ANNAN JURIDISK ANSVARSTEORI ÄN DET EXKLUSIVA ANSVARET I DENNA GARANTI.

Begränsningar av underförstådda Garantier:

Varje underförstådd garanti för säljbarhet, eller lämplighet för ett visst syfte, eller användning ska begränsas till varaktigheten av föregående uttryckliga skriftliga garanti.

Garantivillkor:

COWAYs fortsatta ansvar enligt denna garanti är villkorat av följande:

- a) Defekten eller skadan är inte orsakad av eller är resultatet av: onormal användning eller förhållanden; felaktig lagring, obehörig modifiering eller reparation; missbruk, försummelse, olycka, förändring, felaktig installation, eller andra handlingar som inte är Coways eller tillverkarens fel, eller som inte täcks av tillverkarens garanti;
- b) Produkten har inte ändrats, modifierats eller reparerats utan föregående skriftligt godkännande från COWAY;
- c) ÄGAREN har skriftligen meddelat COWAY om fel i produkten som omfattas av denna garanti inom trettio (30) dagar efter ett sådant fel.
- d) Det har inte förekommit någon felaktig användning, missbruk eller försummelse med avseende på Produkten från ÄGAREN.

Avstående:

COWAYs underlåtenhet att när som helst genomdriva eller förlita sig på någon av de villkor som anges här ska inte tolkas som ett avstående från dess rättigheter nedan.

Att få garantiservice och ÄGARENS skyldigheter:

Om produkten inte fungerar för sitt avsedda ändamål, meddela COWAY eller dess representant inom 48 timmar, eller inom nästa arbetsdag efter upptäckt av defekter i produkten. ÄGAREN måste meddela COWAY skriftligen senast trettio (30) dagar efter att en defekt upptäcktes eller borde med rimlig omsorg ha upptäckts. Krav enligt denna garanti kommer att kräva bevis på köpet av ÄGAREN.

COWAY
Add : Coway Co., Ltd. 136-23, Yugumagoksa-ro, Yugu-eup, Gongju-si, Chungcheongnam-do, Korea Tel.: +82-1588-5100

COWAY EU
Tel.: UK - London : +44 2032807197 GERMANY - Hamburg : +49 4087406758 FRANCE - Paris : +33 170120004 ITALY - Milan : +39 0236003045 SPAIN - Madrid : +34 911234181 Mail : info_eu@coway.com Web : de.coway.com

POLAND
Add : OPUS SP. z o.o. Toruńska 8, 44-122 Gliwice Tel.: +32 4201255 Mail : serwis@opus.pl

SWEDEN
Add : Albion Nordic AB Traktorgatan 2 745 37 Enköping Sweden Tel.: +46 171 66 33 00 Mail : info@albionnordic.com Web : www.albionnordic.com

TURKEY
Add : HAKMAN ELEKTRONIK SAN. VE TIC. A.Ş. Dikilitaş mahallesi Emirhan Cad. Barbaros Plaza İş Merkezi No:113 K.5 Beşiktaş / İSTANBUL Tel.: +90 212 217 11 60 Mail : info@hakman.com.tr Web : https://www.hakman.com.tr

001

9241654

coway
AIRMEGA

www.cowaymega.com

Made in China