


BioZone PR units require only a minimal amount of maintenance. We suggest you open your unit and clean the UV lamp and the case periodically with a soft cloth and alcohol. Make sure the power cord is unplugged before attempting to open the case. Failure to keep the lamp and the interior clean will hinder the purifying ability of your unit.

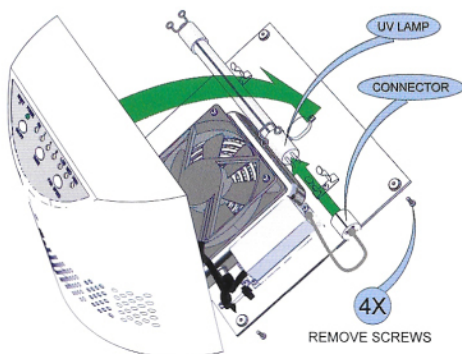

UV Lamp Replacement

After approximately one year of continuous use, the UV lamps will lose their effectiveness and need to be replaced (even though the lamps may still appear to be functioning). To replace the lamp:

1. Turn the unit off.
2. Unplug the power cord from the electrical outlet.
3. Unscrew the back panel of the unit. The UV lamp is mounted on this panel.
4. Gently lift the lamp out of the clamps.
5. Locate the lamp socket and pull this off the end of the lamp.
6. Replace with new BioZone lamp (use of any other lamp will void warranty).
7. Close and screw the back panel in place.
8. Plug the power cord back into the electrical outlet.
9. Press the "Lamp Life" RESET button and then turn the unit on. (Power LED will return to green color indicating normal operation.)
10. The UV Lamp contains small traces of mercury. Dispose of the old lamp in accordance with local hazardous material disposal laws.

Replacement Parts

Contact your sales representative for replacement of lamps and other components. Use of parts other than those supplied by the original manufacturer will void warranty.

UV Lamp for model PR05:	BioZone Lamp #10-08010
UV Lamp for model PR10:	BioZone Lamp #10-08025
UV Lamp for model PR20:	BioZone Lamp #10-08050
UV Lamp for model PR30:	BioZone Lamp #10-08100