

Airgle Clean Room Air Purifier

For Healthcare Applications



Purified Air for Healthcare Settings

Sanitizing surfaces is necessary but not sufficient in the fight to halt the spread of HAIs and infectious diseases such as COVID 19. Viruses and bacteria that are airborne, or can become airborne – for example when bedding is changed – need to be removed from the air to limit cross-infection.

Proper air purification to remove viruses and bacteria from the air can reduce cross-infection and HAIs. Studies have shown that non-biologic micro and nanoparticles in the air increase the likelihood of a patient developing pneumonia, therefore, for best patient outcomes, particulate matter should also be removed from the air.

In addition to potentially impacting patient morbidity rates, exposure to viral, bacterial and other contaminants, such as VOCs in the air can have significantly negative impact on hospital employees. Doing everything possible to provide purified air can help reduce employee health concerns.



AG600/900

American Lung Association.

Airgle Corp is proud of our partnership with the American Lung Association and the important clean indoor air initiatives we share.



Air Purification Designed for Hospitals

The Airgle AG600 and AG900 are air purifiers specifically engineered to help with airborne infection control at hospitals, clinics, dental practices, and other health care facilities.

The AG900 has 6lbs of activated carbon to remove odors and VOCs and the AG600 has 3.5lbs. The cHEPA filter removes particles including nanoparticles as small as 3nm (0.003µm) with a 99.999% efficiency¹. Nanoparticles, such as viruses, which can pass through ordinary filters and may remain airborne almost indefinitely, are captured by our cHEPA filter. Finally, the patented Titanium Pro[®] photocatalytic oxidation (PCO) module generates hydroxyl radicals to destroy harmful organics².

The Airgle AG600 and AG900 are remarkably quiet and are easy to move around on their integrated casters. They are perfect for treatment rooms and for waiting rooms where airborne cross-infection is a concern.

Medical-Grade Air Purification Technology for use in critical areas to remove

- Particles
- Viruses, Bacteria, Microbes
- Chemicals


1) Third party permeability testing.

2) Thousands of research papers detail the ability of hydroxyl radicals to inactivate or destroy viruses, bacteria, VOCs and other organic materials in the air and on surfaces.

AG900: COVID-19 (SARS-CoV-2) virus reduction of 99.998%

Cirgle Precisely Pure

(below the sensitivity limit of detection equipment)

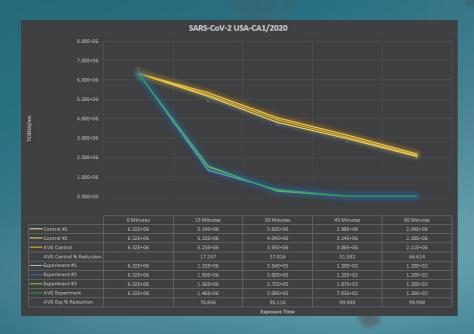

• Purpose To evaluate how much airborne virus can be removed by operating the AG900 product

• Testing organization Certified BSL-3 laboratory in the United States

• Date of test June 14, 2021

• Equipment Tested Airgle AG900 Air Purifier

• Sample Virus SARS-CoV-2 USA-CA1/2020

COVID-19 (SARS-CoV-2) virus


Test Results

The Airgle AG900 air purification device performed to manufacturer's specifications and demonstrated a reduction to below testing equipment sensitivity of greater than a 99.998% reduction of recoverable active SARS-CoV- 2 virus in the air after 60 minutes of operation. There was no cytopathic effect in the lowest concentration of vero e6 cells, indicating a SARS-CoV-2 virus concentration lower than the limit of detection after a 21-day incubation.

The overall dimensions of the test chamber were approximately 20'x8'x8' with a displacement volume of 1280 cubic feet. Based on cubic foot volume the chamber had 36,245.56 liters of air.

Particle Filtration - Airgle cHEPA Filter

Airgle cHEPA filter features medical-grade, clean room level purification with an efficiency of over 99. 999%. The cHEPA removes pollutants as small as 0.003 microns. It powerfully and rapidly removes dust, pollen, tobacco smoke, bacteria, viruses and more.

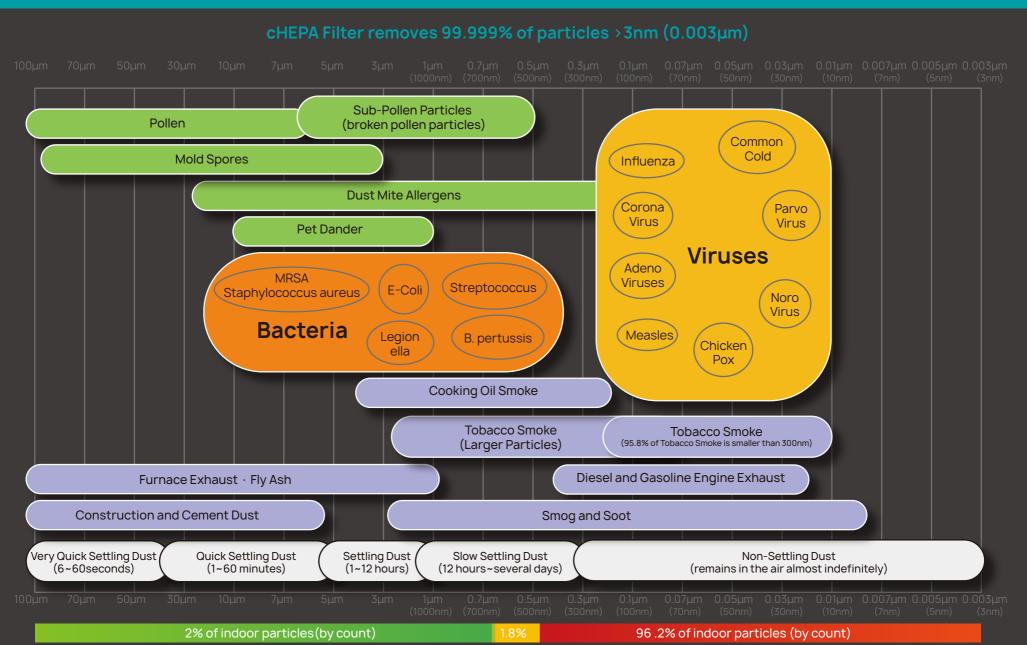


Data from the CDC, the American Society of Industrial Hygiene as well as from scientific pa

Airgle cHEPA Filter - MERV 19

Airgle cHEPA filter features medical-grade, clean room level purification with an efficiency of over 99. 999%. The cHEPA removes pollutants as small as 0.003 microns. It powerfully and rapidly removes dust, pollen, tobacco smoke, bacteria, viruses and more.

	cHEPA Filter removes 9	99.999% of particles >3nm (0.003μm)
MERV Rating	Air Filter will trap Air Particles size	Filter Type
5	.03 to 1.0 microns	Removes These Particles
MERV 1	<20%	File angle of C. Alexesian we block
MERV 2	<20%	Fiberglass & Aluminum Mesh ~
MERV 3	<20%	Pollen, Dust Mites, Spray Paint, Carpet Fibers
MERV 4	<20%	
MERV 5	<20%	
MERV 6	< 20%	Cheap Disposable Filters
MERV 7	< 20%	Mold Spores, Cooking Dusts, Hair Spray, Furniture Polish
MERV 8	<20%	······································
MERV 9	<20%	
MERV 10	< 20%	Better Home Box Filters
MERV 11	< 20%	۔ Lead Dust, Flour, Auto Fumes,Welding Fumes
MERV 12	<20%	
MERV 13	Less than 75%	
MERV 14	75%~84%	Superior Commercial Filters
MERV 15	85%~94%	~ Bacteria, Smoke, Sneezes
MERV 16	95% or Better	
MERV 17	99.97%	
MERV 18	99.997%	HEPA & ULPA
MERV 19	99.9997% Air	~ Gle cHEPA Viruses, Carbon Dust, >0.3 μm
MERV 20	99.99997%	

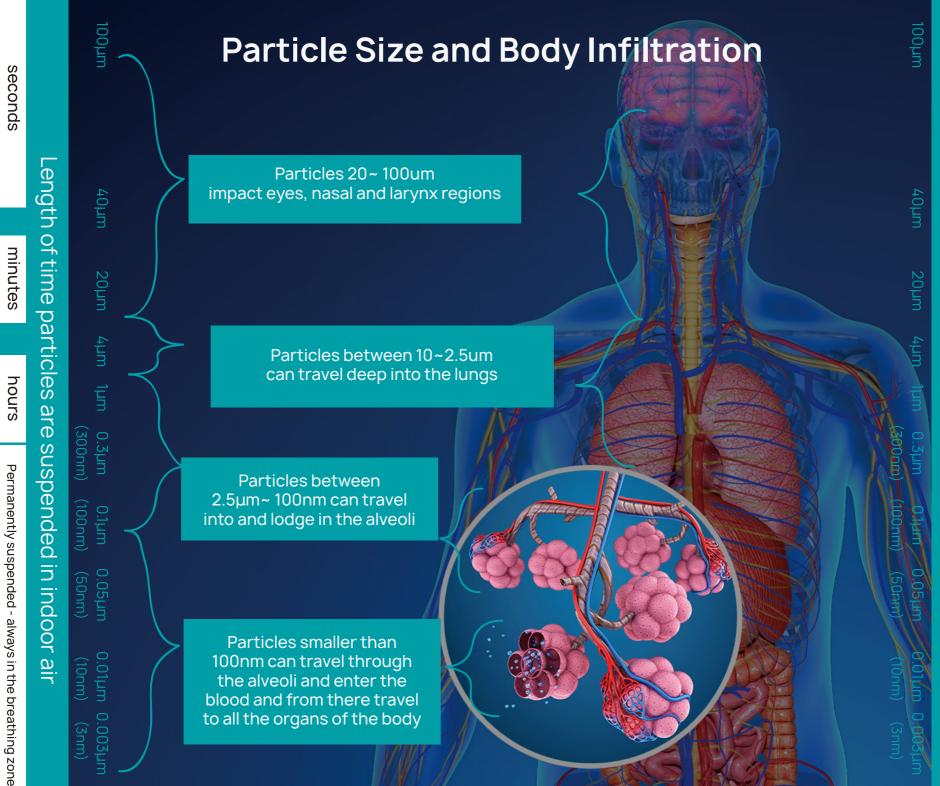

cHEPA Filter

Includes 98% of the germs that cause diseases

ω

12

34

2.25

сл

20

ю . 5




Microbial mitigation Bacteria and Virus

Titanium Pro[®] module breaks apart organics, chemicals, bacteria and viruses in the air. This patented photocatalytic oxidation (PCO) technology features a catalytic metal plate, electronics, germicidal UV lamp and ballast in one disposable module designed for easy insertion and removal. The Titanium Pro[®] safely breaks down harmful chemicals and odors down to 0.1 micron in size, while effectively killing bacterial and viral pollutants.

Third-party testing show the AG900 and the AG600 achieve a 6-log reduction (99.9999%) in bacteria.

Titanium Pro[®] UV Module


Effectively destroys chemicals, bacteria, viruses, and TVOCs

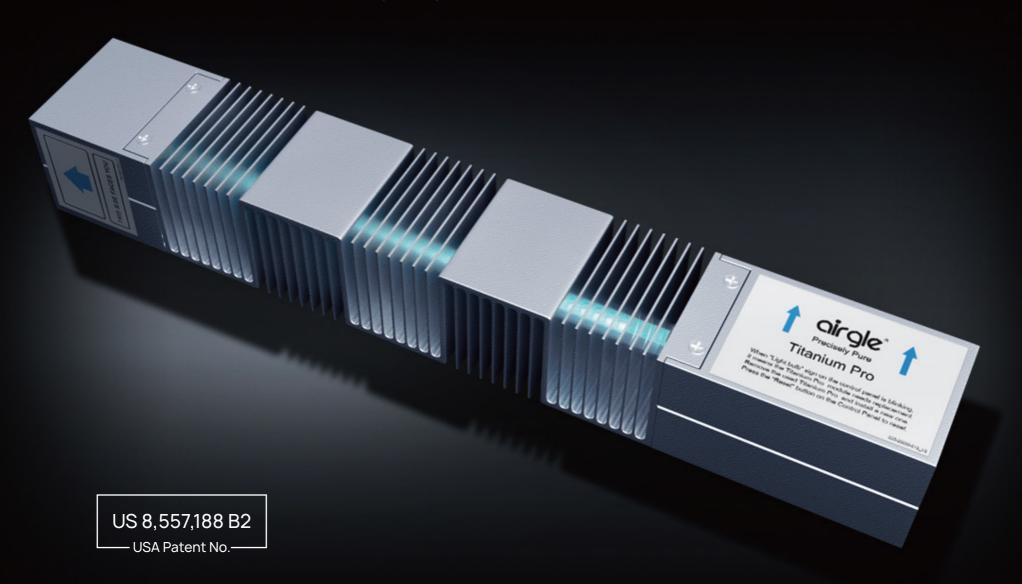


Titanium Pro[®] UV PCO Technology

Years of hard work by the Airgle R&D team led the development of the state-of-the-art Titanium Pro^{\circ} UV photocatalytic oxidization (PCO) module. The substrate surface of the nano-titanium dioxide carrier is coated with TiO₂, a stable and harmless substance widely used in American food additives and cosmetics. Under UV irradiation, TiO₂ emits strong oxidizing hydroxyl radicals.


In health-care settings, Titanium Pro[®] provides added protection from harmful pathogens and unpleasant odors. The hydroxyl radicals and superoxide ions oxidize airborne organic pollutants, breaking them into simple molecules such as carbon dioxide and water. They destroy living spores, bacteria, molds and viruses. They also break down VOCs, chemical gases and unpleasant odors in the air.

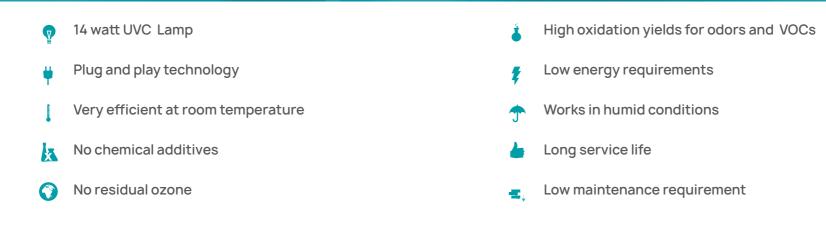

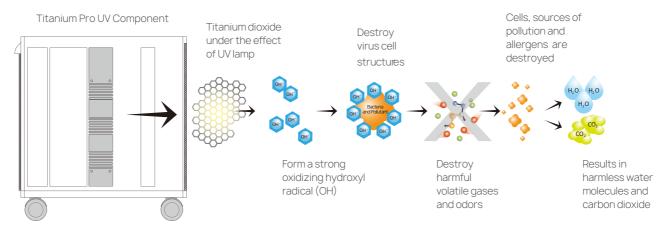


Chemical/Odor Filtration

Chemicals used for surface sterilization release VOCs into the air. The AG900 features 6 lbs. of activated carbon to captures chemicals, tobacco smoke, odors, and volatile organic compounds (VOCs). Coconut shells produce extremely high surface area when turned into activated carbon. This allows a higher capacity per pound to capture VOCs and other pollutants than other types of activated carbon. In addition, coconut shells are a completely renewable resource.

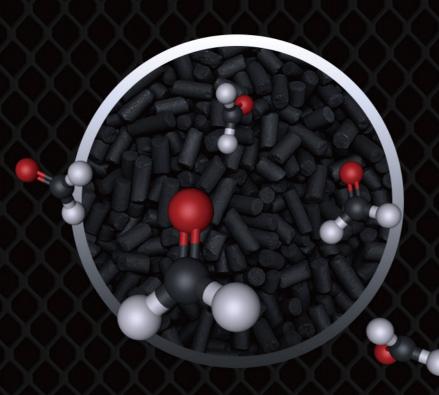

Powerful and Practical

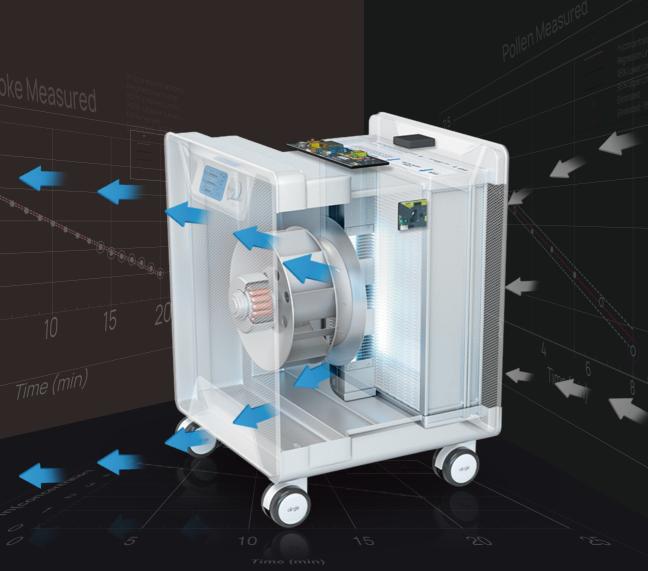



Key Features:

- Ultra-quiet motor technology
- Aluminum housing
- Easy-to-replace Filters
- Handy remote control
- Ozone-free technology
- Energy Star qualified
- Programmable LCD control panel
- Auto & night modes
- Variable timer
- System control setting
- Continuous air quality monitoring
- Plug and play technology

Maximum Air Flow and Fast Purification

The National Institutes of Health have said that COVID-19 laden droplets from coughs and sneezes can stay in the air for 3 hours or more. VOCs remain airborne indefinitely and many other airborne pathogens have very slow precipitation rates and can remain in the air for many hours or even days. The less time a pathogen remains in the air, the lower the chance of cross-infection. That is why Airgle recommends a minimum of 5 Air Changes per Hour (ACH)³. The AG900 provides 5 ACH for a 617 sq. ft. room – that is one ACH every 12 minutes. Used in a 20' x 20' room, the AG900 provides one ACH every 8 minutes.

3) Each time the entire volume of air in a room is purified is called an Air Change per Hour (ACH).



Technological Design

Featuring an inlet seal design and aluminum housing, the Airgle Air Purifier's technological aesthetic embodies a North American standard of excellence. Each component of the product's performance and durability complies with the UL507 Safety Certification as well as the California State Government and AHAM Standards.



The smart control technology in the Airgle APP enables administrators to remotely monitor and control all the Airgle units in the hospital.

Features include:

- Admin access to remotely manage hundreds of devices
- Real time monitoring of air quality
- Remote regulation of speed operation
- Advanced timer setup, creation of unique time/date templates for all/some wards
- Filter replacement reminders







Aluminum Frame Filters meet CDC Recommendations

Airgle filters are framed in aluminum which meet CDC recommendations for filters because metal frames can provide greater protection against bacteria and mold than paper, wood or Styrofoam.

Airgle's aluminum filter frames are rigid so changes in temperature and humidity won't cause them to change shape or degrade. That is a key component to maintaining the 100% seal that ensures all the air passing through the Airgle Clean Room Air Purifier passes through the filters, rather than leaking through without filtration.



Hospitals use Airgle Hospitals and health systems in America at the forefront of the COVID-19 outbreak



Virtua:

14,000 employees provide safe, high-quality, tertiary care, including a nationally recognized cardiovascular program, complemented by community-based care programs.

Grady:

The largest hospital in the state of Georgia and the public hospital for the entire city of Atlanta. And the 5th largest public hospital in the United States, as well as one of the busiest Level I trauma centers in the country.

Marshall Hospital:

Marshall Medical Center is a nonprofit community healthcare provider located in the heart of the Sierra Foothills. Since opening our doors in 1959, Marshall has been proud to maintain our status as an independent hospital whose governance remains local.

Wagner Indian Health System:

Yankton Medical Clinic, P.C. is a multi-specialty clinic with 43 physicians covering 17 specialties, more than 220 employees, 4 clinic locations and 15 outreach locations in Nebraska and South Dakota.

Winnebago Comprehensive Healthcare System

Primary care clinics acts as principal point of healthcare services to patients of all ages - evaluation and treatment is usually provided by general practitioners and family medicine doctors.

12 Clans Unity Hospital:

A full-service state of the art facility, providing inpatient, outpatient and emergency care to the Winnebago community and Native American patients within the region.

Hospitals use Airgle Hong Kong hospitals at the forefront of the COVID-19 outbreak



Hospitals use Airgle Hospitals the Middle East at the forefront of the COVID-19 outbreak



Saudi Arabia Medical





MINISTRY OF HEALTH	MOH IBRAHIM BIN HAMAD OBAIDULLAH (SAIF) HOSPITAL
MINISTRY OF HEALTH	MOH UMM AL QUWAIN HOSPITAL
MINISTRY OF HEALTH	MOH ABDULLAH BIN OMRAN HOSPITAL
MINISTRY OF HEALTH	MOH MUSHAIRIF HEALTH CENTER
MINISTRY OF HEALTH	MOH AL HAMIDIA HEALTH CENTRE
MINISTRY OF HEALTH	MOH AL KHAZAN HEALTH CENTER
MINISTRY OF HEALTH	MOH AL MADINA HEALTH CENTER
MINISTRY OF HEALTH	MOH AL QURRAYAH HEALTH CENTER
MINISTRY OF HEALTH	MOH MURBAH HEALTH CENTRE
MINISTRY OF HEALTH	MOH AL QIDFAH HEALTH CENTER
MINISTRY OF HEALTH	MOH AL JEER HEALTH CENTER
MINISTRY OF HEALTH	MOH JULPHAR MEDICAL CENTRE RAK
MINISTRY OF HEALTH	MOH AL RAMS HEALTH CENTRE
MINISTRY OF HEALTH	MOH AL HALA MEDICAL CENTRE
MINISTRY OF HEALTH	MOH AL KHULAIBIYA HEALTH CENTRE
MINISTRY OF HEALTH	MOH AL TAWYEEN HEALTH CENTER
MINISTRY OF HEALTH	MOH AL KADRA HEALTH CENTER
MINISTRY OF HEALTH	MOH AL SHAWKA HEALTH CENTER
MINISTRY OF HEALTH	MOH AL MANAI HEALTH CENTER
MINISTRY OF HEALTH	MOH WADI ASFENI HEALTH CENTER
MINISTRY OF HEALTH	MOH AL MUZAIARAH HEALTH CENTER
MINISTRY OF HEALTH	MOH FALAJ AL MULLA HEALTH CENTRE
MINISTRY OF HEALTH	MOH AL MANAMA HEALTH CENTER
MINISTRY OF HEALTH	MOH AL MAEREED HEALTH CENTER
MINISTRY OF HEALTH	MOH DIBBA AL HASAN HEALTH CENTRE
MINISTRY OF HEALTH	MOH AL JAZIRAH HEALTH CENTER
MINISTRY OF HEALTH	MOH AL DHAIT HEALTH CENTER
MINISTRY OF HEALTH	MOH AL DIGDAGGA HEALTH CENTER
MINISTRY OF HEALTH	MOH KHATT HEALTH CENTER
MINISTRY OF HEALTH	MOH SAIF BIN ALI HEALTH CENTER
MINISTRY OF HEALTH	MOH AL LULUEYAH HEALTH CENTER
MINISTRY OF HEALTH	MOH SHAMAL HEALTH CENTRE
MINISTRY OF HEALTH	MOH RAK PHC
MINISTRY OF HEALTH	MOH AL BIDYA HC
MINISTRY OF HEALTH	MOH AL DADNA HC
MINISTRY OF HEALTH	MOH FAMILY PROMOTION HC
MINISTRY OF HEALTH	MOH MURSHID HC
MINISTRY OF HEALTH	MOH KHORFAKKAN SPECIALIZED DENTAL CENRE
MINISTRY OF HEALTH	MOH HAMRIYA HEALTH CENTER







الإمارات العربية المتحدة وزارة الصحية و وقياية المجتمع















Global Organizations Trust Airgle

Companies around the world have turned to Airgle to let their staff and their guests know that they care about the air. Especially now, it is important for the peace of mind of all the people who gather in your establishment to know that you are doing your best to keep the air they breath safe and healthful.



Kering





unicef

Airgle Has Been Awarded A Long Term Arrangement (LTA) For Air Purifiers By United Nations Children's Fund (UNICEF)

UNICEF Works in over 190 countries and territories to protect the rights of every child

Third Party Testing



- 1 Third party testing of particle 2.5 and 10 microns removal rate by ZOL.com.cn for 23 leading brands of air purifiers (unit: UG/M³, the small residue, the better result)
- 2 Third party testing of smoke particle removal rate by ZOL.com.cn for 23 leading brands of air purifiers (unit: seconds, the less time used to remove, the better result)
- 3 Third party testing of applicable area by ZOL.com.cn for 23 leading brands of air purifiers (unit: m² the large area, the better result)

■ PM2.5

Airgle

PM10



Certification

Association of Home Appliance Manufacturers



Independently Tested. Consumer Trusted.

					-	In	tertek i	Administrator, NAM Room Ai	r Cleaner Certification Program		_	ertek			ON TO MA		described intProduct(s)
		Inte	ertek AL	JTHORIZATION T	O MARK			9933 US Route Tel: (607) 758-	11, Cortland, NY 13045 -5565 Fax: (607) 755-0459 C ROOM AI R CLE.		Covered se	action when ma	ade in accordance	with there	tions set forth	in the Certific	described interroduct(s) ation Agreemend aisting rrelation pagethe Listing
		(This auth	orizes the application of	the Certification Mark(s)	shown below	1	NO	OTICE OF Airgle Cor	F MAXIMUM CE RTI rporation				perty of intertek Te n of the Party Autho			nsferable. The o	certificati ma rk(s) may be
			section when made in act his authorization also app					Mr. Iva 244 5 th Suite	^h Ave		Applicant:	SHENZHEN A LIMITED	NRGLE CORPORATIO	ON	Manufacturer:	SHENZHEN AI LIMITED	IRGLE CORPORATION
	_		ment is the property of a nly at the location of the Pa			Enclosed		New York I		the following		Building, Qua	he 11th Floor, KeChu anZhi Science &			Building, Qua	e 11th Floor, KeChuang InZhi Science &
	ator,	Applicant: Address:	Airgle Corporation One Huntington Quadra 2005 Mehille New York	ingle. Suite		should yo Program.	ur company choos	e to certify	the following mo dels AH A	M Portable I	Address:	Maozhousha Street, Baoar	Innovation Park, Hou an Industrial Park, Sh n District, Shenzhe	haJing	Address:	Maozhoushar Street, Baoan	novation Park, Houting n Industrial Park, ShaJing n District, Shenzhen,
	en Air Cleaner Certification Program Joute 11, Certland, NY 13045 758-6366 Fax: (607) 753-0439	Country: Contact	USA dk chen / Ivan Lo +85-18938792157	Country Contact	Ms. Be		G100392040		Brand	Model I AG	Country: Contact:	Guangdong, China Jerry Liu	China		Country: Contact:	Guangdong, (China Jerry Liu	China
AHAM PORTABLE ELECT	RIC ROOM AL R CLE	Phone: FAX:	(718) 395-2377	Phone: FAX:	86-158		G100392040		Airqle	AG	Phone:	86-755-8672	16696		Phone:	86-755-86728	5695
	OF MAXIMUM CE RTI	Email:	dk@airgle.com.cn /	Email	benef		G100392040		Airale	AG	FAX: Email:	jerry@airgle.c	com.on		FAX: Email:	jerry@airgle.c	com.cn
Airgle	Corporation	Party Auth	erized To Apply Mark: ***			The test	s indicate that 1	the certile	indes must not exeed	the follow		rized To Apply P		lanufacture			
244 5 New Enclosed is a copy of a room air c		Report has		_		Voltag		· ()H			Report Issuir				ices Shenzhen I	and	afich
should your company choose to c Program. Test Report No.	S –	Control Nu	mber: 4006114	Inte	rtek	120 ENERGY	60 (STAR Informati	ion	6-	-	Control Num	1ber: 50023	50 Autho	orized by:	Thomas	J. Patterson, Cr	Minication Manager
G100588867CRT-00	Nathew Rodrignez Secretary for Francoise ets/ Protection		This decimant are				is model meet t	he	Nathew Rodrigers Secretary for Environments' Protection	•				ⓓ) _{us}		
The tests indicate that the c	June 9, 2016	Emilard to the Lam by the use of this, neutrinitial to the s	This document su, to bit in the the vehicles are if a solution line of the agreement and the solution in the Agreement is solition, actual is the agreement is solitive particular for the solition of the agreement of the solution of the solition of the agreement of the solution of the s	AHAM P	ORTAB	NO./ID N/A	NO. Consump (Watts N/A	9	June 9, 2016		This & Shar Callon to	Mark in No. The Average	nt supersedes all pro-	and the second s	noriza sión Mark	and some to be a first state of the	eport Number.
Voltage Frequency (Hz 115 60	Jenry Liu Shenzhen Arro		те			N/A	N/A	_	Jerry Liu Shenzhen Argk		by the sale of this Authority Control of the Con- tractic Development of the Con- tractic Development of the Con-	rolation to Mark, Only the validons land out in the agreement writing by interfact, in the	Count is authorized to permit cop	pring or distribution is Mark. Any funded up Services are file	of this Authorization to Hart add the order tex, name Tur etitization of assume app	and from previous entro the sale or advertised of roomable usage of the Sale	ty, Use of Photos's Confection mark is the tested-industrial product or service must allow mark in accordance with the
ENERGY STAR Information (Zone A&B, 11 Quanzhi Scien Shanohai Stre	Standards Product Models:	UL standard for s Air Purifier AG800, AG850, A	Enclosed is a c should your co		Proced	rdance with the ural Guide, mod	lel (Zone A&B, 11 ²¹ Quanzhi Scienc Shanohai Stree	e and Tec				nouin Road.	lervices NA Inc. Arlington Height 47-439-5667 Fax	s, IL 6050 <312-28872	
Does this model meet the E	Shenzhen, Gu			Program.			ce should be m		Shenzhen, Gua	ingdong 5	Standard(s)	UL 507 Issues	d: 1999/12/13 Ed: 9 P	Rev: 2015/0	18/04 Eletric Far	ns	
Serial Total Energy No /ID No Consumption	CHINA			Tes	st Repor		rogram for add		CHINA		Product:	Air Cleaner					
No./ID No. Consumption (Watts)	Dear Mr. Liu:			101	240049		1.5	~	Dear Mr. Liu:		Brand Name						
1 172.3		ATM for	Report 15011405462		2240049		m Administra	at c			Models:	AG500, AG50	DOS, AG550, AG550	IS, AG600, A	VG600S		
2 184.3	Thank you for cleaning devic				240049	riogra	maunimistra	100	Thank you for s cleaning device								
3 185.9	determined the								determined that	t the arr di							
In a second second where the	State of Californ			The tests in	dicate t				State of Californ 17. California C								(Issued: 29-Mar-2016
In accordance with the terr Procedural Guide, model d. certified and to be includer	17. Ca'ifornia Cr cleaner regulatio		uiaeons, subch						cleaner regulati		ATM for	r Report 15092	5060GZU-001	Page 1	l of l	AIN	ID16.116 (1-an-10) Medatory
Reference should be made	As part of the re	aulation A	RB issues Fre						As part of the re	equilation.							
of the Program for additior	certified as mee	ing the rea	quirements of th	Voltage	Frequer	ncy (Hz)	Smoke		certified as met	eting the req			n. The enclosed				
C) C	number G-16-06	i4, ıs a leg	al document the	120	6	0	191						it the indoor air o ad by the State o				



Meets California ozone emissions limit: CARB certified.



Search Roon	n Air Cleaners
Brand Name:	
Airgle	
Dust CADR:	
Equals	•
Pollen CADR:	
Equals	•
Tobacco Sm	oke CADR:
Equals	•
Volts/Freque	ncy
	•
Units	
English	•
Room Size (S	Sq Ft): Calculate Rm Siz
Equals	•
ENERGY STA	R®:
Only show	ENERGY STAR®
View Listing	Due
Brand Na	
Room Siz	
-	

Durt

AHAM

10	-			
15	1 - 1		The second	
	1 -1	4		
		A P		

www.AHAMVerifide.org

Dehumidifiers Room Air Cleaners Room Air Conditioners

Independently Tested. Consumer Trusted.

Search Room Air Cleaners:

 Airgle						
Brand	Model Number	Room Size (sq. ft)	Dust	Pollen	Tobacco Smoke	ENERGY STAR®
Airgle	AG600	296	197	191	191	Yes
Airgle	AG600S	296	197	191	191	Yes
Airgle	AG550	304	235	224	196	Yes
Airgle	AG500	369	253	239	238	Yes
Airgle	AG500S	369	253	239	238	Yes
Airgle	PurePal AG900	617	400	379	398	Yes
Airgle	PurePal AG800	698	> 400	> 450	> 450	Yes

Technical Information		
Specifications	Airgle AG900	Airgle AG600
Maximum Clean air delivery	400cfm	219cfm
	Smoke: 398 cfm	Smoke: 191cfm
Clean Air Delivery Rate (CADR)	Dust: 400 cfm	Dust: 197cfm
	Pollen: 379 cfm	Pollen: 191 cfm
	Speed 1=108cfm,	Speed 1=42cfm,
	Speed 2=148cfm,	Speed 2=81cfm,
Clean Air delivery for all five fan speeds (in cfm)	Speed 3=186cfm,	Speed 3=128cfm,
	Speed 4=231cfm,	Speed 4=182cfm,
	Speed 5 (Turbo)=400cfm	Speed 5 (Turbo)=219cfm
	Speed 1: 33 dB(A),	Speed 1: 33 dB(A),
	Speed 2: 45 dB(A),	Speed 2: 45 dB(A),
Noise level	Speed 3: 50 dB(A),	Speed 3: 50 dB(A),
	Speed 4: 59 dB(A),	Speed 4: 58 dB(A),
	Speed 5 (Turbo): 68 dB(A)	Speed 5 (Turbo): 65 dB(A)
Air cleaner dimensions (HxWxD)	25 x 17.7 x 18.1 in.	15 x 15.6 x 20.2 in.
Air cleaner weight (incl. filters)	56.5 (lbs.)	35.3 (lbs.)
Power requirements		100-240V 50Hz - 60Hz
Maximum energy consumption	120W	55W
	Stand by=0.4W,	Stand by=1.5W,
	Speed 1=42W,	Speed 1=17.5W,
	Speed 2=55W,	Speed 2=21.7W,
Rated power	Speed 3=68W,	Speed 3=28.9W,
	Speed 4=80W,	Speed 4=39W,
	Speed 5 (Turbo)=120W	Speed 5 (Turbo)=55.8W
ENERGY STAR (Dust CADR/Watt)	3.0	3.5
Room size (ft²)	617 ft ²	296 ft ²
Fan motor		BLDC Motor
Control panel	S	peed control knob, buttons and indicators
Air intake		Rear
Air outlet		Front
Housing material		Aluminum with sandblast effect
Performance		
Performance certification	AHAM, Ei	nergyStar and other International Testing Agency
Certified filtration efficiency	Greater	than 99.999% for particles \geq 0.003 microns (µm)
Titanium Pro UV		Yes
Bacteria	99.9999%	99.9999%

Ozone	Zero C	Dzone		
Certified air delivery	10% (+ or - 10 cfm) of	specified air delivery		
T.V.O.C Test	99%	99%		
Leak tested	Ye	rs		
Filter Configuration				
Pre-filter	One layer of pre-filter: metal	grill capturing large particles		
CHEPA	cHEPA, 2.0 Inch depth, Medical-grade, PP material, Surface area: 40 sq. ft. MPPS efficiency: 99.999% @ 0.003µm	cHEPA,2.0 Inch depth,Medical-grade, PP material, Surface area: 26 sq. ft. MPPS efficiency: 99.999% @ 0.003µm		
cHEPA dimensions (LxWxD)	19.1 x 15.9 x 2.0 in.	16.14x 13.58x 1.97 in		
Carbon media	6 lbs. of enhanced carbon blend	3.5 lbs. of enhanced carbons blend		
Carbon Filter dimensions (LxWxH)	19.1 x 15.9 x 3.1 in.	16.14 x 13.58x 1.97 in.		
Tio ₂ UV light	US Patented Plug and Play Technology -14W	US Patented Plug and Play Technology -10W		
Average filter life	12 months	12 months		
cHEPA & Carbon Filter weight (net weight)	13.7 (lb.)	8.6 (lb.)		
cHEPA & Carbon Filter weight (Gross weight)	19.1 (lb.)	12.8 (lb.)		
cHEPA & Carbon Filter dimensions (LxWxH) (With packing)	20.5 x 17.64 x 7.44 in.	17.6 x 15.3x 6.3 in.		
Control Panel Features				
Intelligent filter life monitor	Ye	S		
Timer	1-1.	2H		
Speeds	LCD 1, 2, 3, 4, 5 (Turbo)			
Auto mode	Sensor checks pollution level and automatically adjusts fan speed for best performance			
	Close backlight\ LED display\ LCD display			
Sleep mode	Close backlight\ LED	display\ LCD display		
•	Close backlight\ LED iOS and			
APP Control		android		
APP Control	iOS and • Smart Control Cloud Computing Technology with the APP • Real time monitor air quality and regulate speed and more on AP	android P		
Sleep mode APP Control APP Features	iOS and • Smart Control Cloud Computing Technology with the APP • Real time monitor air quality and regulate speed and more on AP • Admin access, easily manage up to thousands of devices	android P		
APP Control	iOS and • Smart Control Cloud Computing Technology with the APP • Real time monitor air quality and regulate speed and more on AP • Admin access, easily manage up to thousands of devices • Build a database of customers and offer repeat sales. Filter replace	android P acement reminders		
APP Control	iOS and • Smart Control Cloud Computing Technology with the APP • Real time monitor air quality and regulate speed and more on AP • Admin access, easily manage up to thousands of devices • Build a database of customers and offer repeat sales. Filter repl • Easily manage your rental customers	android P acement reminders		
APP Control APP Features	iOS and • Smart Control Cloud Computing Technology with the APP • Real time monitor air quality and regulate speed and more on AP • Admin access, easily manage up to thousands of devices • Build a database of customers and offer repeat sales. Filter repl • Easily manage your rental customers	android P acement reminders managed customers		
APP Control APP Features ACCessories	iOS and • Smart Control Cloud Computing Technology with the APP • Real time monitor air quality and regulate speed and more on AP • Admin access, easily manage up to thousands of devices • Build a database of customers and offer repeat sales. Filter repl • Easily manage your rental customers • Advanced Timer setup, unique time/date templates for all/some	android P acement reminders managed customers		
APP Control APP Features APP Features Standard accessories	iOS and Smart Control Cloud Computing Technology with the APP Real time monitor air quality and regulate speed and more on AP Admin access, easily manage up to thousands of devices Build a database of customers and offer repeat sales. Filter repl Easily manage your rental customers Advanced Timer setup, unique time/date templates for all/some Remote control (battery included) (1), Casters (4), Owner's Instru	android P acement reminders managed customers ction (1)		









About Airgle:

In 1999 in New York, we began our mission to design and manufacture the safest, most reliable, and most effective air purification systems on the market. Our dedication to purifying <u>Air</u> with a <u>G</u>reat <u>L</u>evel of <u>E</u>fficiency has made us a world class provider of air purification. Internationally Airgle Holdings includes businesses in United States, United Kingdom, Canada, Germany, Austria, Denmark, Switzerland, Japan, South Korea, India, Singapore, Thailand, Vietnam, Saudi Arabia, United Arab Emirates, Qatar, Kuwait, Russia, China (the Mainland, Hong Kong and Macao) and Others.



AIRGLE[®] CUSTOMER CARE Toll-Free: (866) 501-7750 info@airgle.com www.airgle.com