
S5

Air Purifier and Lamp

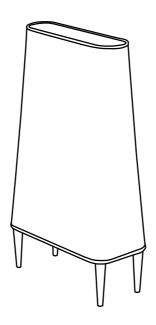

User Manual.


sunnaform

TACK!

Dear Customer, thank you for choosing a Sunnaform S5 air purifier and lamp. We are positive that you will be satisfied with your choice. Though we aim to make our products intuitive and self-explanatory, you might need some guidance on how to install and maintain the unit. Please note that the unit should only be used in dry indoor environments. If you have any questions please don't hesitate to contact us.

SETUP.

- Take off the the lamp shade and remove the dust protection plastic.
- Insert the G4 LED lamp into the lamp socket.
- Unpack the filter bag and place it over the filter bracket.
- Seal the filter bag with the elastic band.
- Mount the lamp shade.
- Insert the power supply into the inlet at bottom of unit and plug the power adaptor into the wall outlet. The fans start instantly.
- Control the light on/off with the push switch that is placed underneath the unit.

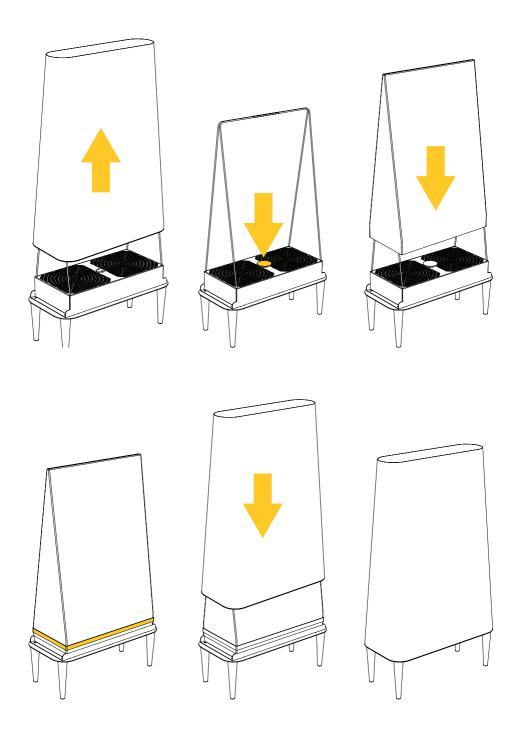

FILTER REPLACEMENT.

The filter bag should be replaced with 3 months interval, or more frequently if you live in a heavily polluted area. New filter bags can be ordered at your stockist or on Sunnaforms webpage (www.sunnaform.se).


- Unplug the unit from the wall socket.
- Remove the lamp shade by lifting it upwards.
- Remove the elastic band.
- Remove the old filter bag by lifting it upwards.
- Replace with a new filter bag.
- Attache the elastic band to seal the filter bag.
- Reattach the lamp shade.
- Plug the power adaptor back into the wall socket.
- Recycle the old filter bag as plastic.

LAMP REPLACEMENT.

- After removing the shade and bag filter as described in the Filter Replacement section above, pull the LED lamp straight up.
- Insert the new lamp by positioning the pins into the two holes. G4 LED, back pins, 3 Watt (Max 4 Watt).
- Re-attach filter and shade per the Filter Replacement steps above.





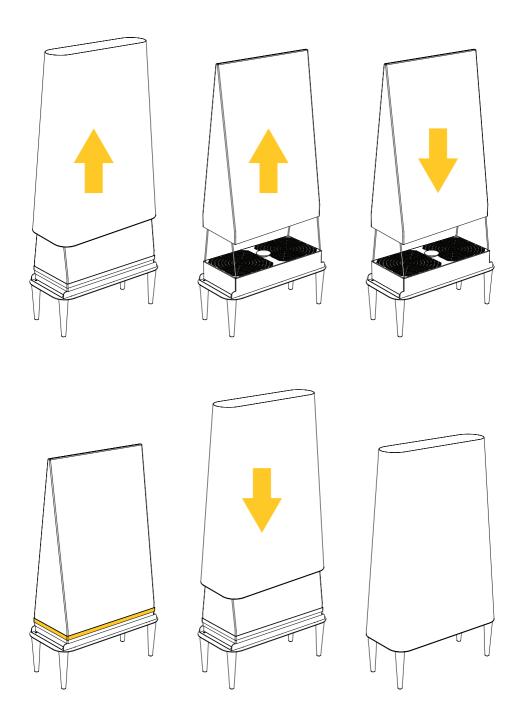

CLEANING THE \$5.

- Unplug the unit.
- Gently remove any dust on the lampshade using a soft brush
- Wipe the metal base and the wooden legs with a damp cloth.

SPECIFICATIONS.

Height 550 mm

Width 320 mm

Depth 155 mm

Weight 1,6 kg

Power, light on 5 W

Power, light off 2 W

Noise 23 dB(A) Clean airflow 55 m³/h Recommended room size 15 m²

Input voltage 100-240 VAC, 50/60 Hz

Lamp type G4, back pin, 3W (Max 4W)

CONTACT.

Email: support@sunnaform.se